SAMSUNG

DVD-E360K
DVD-E360
DVD-E350

DVD Player

User Manual

imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more complete service, please register your product at
www.samsung.com/register

DVD VIDEO COMPACT disc DIGITAL VIDEO COMPACT disc DIGITAL AUDIO

ENGLISH

Precautions

1. Setting up

- Refer to the identification label located on the rear of your player for its proper operating voltage.
- Install your player in a cabinet with adequate ventilation holes. (7~10cm). Do not block ventilation holes on any of the components for air circulation.
- Do not push the disc tray in by hand.
- Do not stack components.
- Be sure to turn all components off before moving the player.
- Before connecting other components to this player, be sure to turn them off.
- Be sure to remove the disc and turn off the player after use, especially if you are not going to use it for a long time.
- The mains plug is used as a disconnect device and shall stay readily operable at any time.

2. For your safety

- This product utilizes a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
- Do not open covers and do not repair your self. Refer servicing to qualified personal.

3. Caution

- Your player is not intended for industrial use but for domestic purposes. Use of this product is for personal use only.
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Exterior influences such as lightning and static electricity can affect normal operation of this player. If this occurs, turn theplayer off and on again with the POWER button, or disconnect and then reconnect the AC power cord to the AC power outlet. The player will operate normally.
- When condensation forms inside the player due to sharp changes in temperature, the player may not operate correctly. If this occurs, leave the player at room temperature until the inside of the player becomes dry and operational.

4. Disc

- Do not clean disc using record-cleaning sprays, benzene, thinner, or other volatile solvents that may cause damage to the disc surface.
- Do not touch the disc's bottom. Hold by the edges or by one edge and the hole in the center.
- Wipe the dirt away gently; never wipe a cloth back and forth over the disc.

5. Environmental info

- The battery used in this product contains chemicals that are harmful to the environment.
- So, dispose the batteries in the proper-manner, according to federal, state, and local regulations.
- Product must not be exposed to any source of heat or flames Etc.

The product unit accompanied this user manual is licenced under certain intellectual property rights of certain third parties. This licence is limited to private non-commercial use by end-user consumers for licenced contents. No rights are granted for commercial use. The licence does not cover any product unit other than this product unit and the licence does not extend to any unlicenced product unit or pro-cess conforming to ISO/OUR 11172-3 or ISO/OUR 13818-3 used or sold in combination with this product unit. The licence only covers the use of this product unit to encode and/or decode audio files conforming to the ISO/OUR 11172-3 or ISO/OUR 13818-3. No rights are granted under this licence for product features or functions that do not conform to the ISO/OUR 11172-3 or ISO/OUR 13818-3.

CAUTION: USE OF ANY CONTROLS, ADJUSTMENTS, OR PROCEDURES OTHER THAN SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE

Table of contens

Precautions 2

Setup

General Features 2
Description 3
Tour of the Remote Control. 4

Connections

Choosing a Connection 4

Basic Functions

Playing a Disc 5
Using the Search and Skip Functions 5
Using the Display Function 6
Using the Disc and Title Menu 6
Repeat Play 6
Slow Play 6

Advanced Functions

Adjusting the Aspect Ratio (EZ View) 6
Selecting the Audio Language 7
Selecting the Subtitle Language 7
Changing the Camera Angle 7
Using the Bookmark Function 7
Using the Zoom Function 7
Clips Menu for MP3/WMA/JPEG/MPEG4/
CD Audio 7
Folder Selection 8
MP3/WMA/CD Audio Playback. 8
MPEG4 Playback. 8
Playing Media Files using the USB HOST
feature (Only DVD-E360K, E360) 9
CD Ripping (Only DVD-E360K, E360). 9
Picture CD Playback 10

Karaoke Functions (Only DVD-E360K)

Karaoke Functions 10

Changing Setup Menu

Using the Setup Menu 11
Setting Up the Display Options. 11
Setting Up the Audio Options 11
Setting Up the System Options 12
Setting Up the Language Features 12
Setting Up the Security Options 12
Setting Up the General Options 12
Setting Up the Support Options 12

Reference

Troubleshooting 13
Specifications 13

Setup

General Features

Excellent Sound
Dolby Digital, a technology developed by Dolby Laboratories, provides crystal clear sound reproduction.

Screen
Both regular and widescreen(16:9) pictures can be viewed.

Slow Motion
An important scene can be viewed in slow motion.

Parental Control (DVD)
The parental control allows users to set the neces-sary level to prohibit children from viewing harmful movies such as those with violence, adult subject matter, etc.

Various On-Screen Menu Functions
You can select various languages (Audio/Subtitle) and screen angles while enjoying movies.

Progressive Scan
Progressive scanning creates an improved picture with double the scan lines of a conventional inter-laced picture

EZ VIEW (DVD)
Easy View enables picture adjustment to match your TV's screen size (16:9 or 4:3).

Digital Photo Viewer (JPEG)
You can view Digital Photos on your TV.

Repeat
You can repeat a song or movie simply by press-ing the REPEAT button

MP3/WMA
This unit can play discs contain MP3/WMA files.

MPEG4
This unit can play MPEG4 formats within an avi file.

CD Ripping (Only DVD-E360K, E360)

This feature lets you to copy audio files from disc to USB device into MP3 format. (Only Audio CD (CD DA)).

Note

- Discs which cannot be played with this player.
  - DVD-ROM
  - DVD-RAM
  - CD-ROM
  - CDV
  - CDI
  - CVD
- Ability to play back may depend on recording conditions.
  - DVD-R, +R
  - CD-RW
  - DVD+RW, -RW (V mode)
- The unit may not play certain CD-R, CD-RW and DVD-R due to the disc type or recording conditions.

COPY PROTECTION

Many DVD discs are encoded with copy protection. Because of this, you should only connect your DVD player directly to your TV, not to a VCR. Connecting to a VCR results in a distorted picture from copy-protected DVD discs.

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of ROVI Corporation. Reverse engineering and disassembly are prohibited.

PROGRESSIVE SCAN OUTPUTS (576p)

"CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE, IN CASE OF 576 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE 'STANDARD DEFINITION' OUTPUT. IF THERE ARE QUESTIONS REGARDING YOUR TV SET COMPATIBILITY WITH THIS MODEL 576p DVD PLAYER, PLEASE CONTACT SAMSUNG'S CUSTOMER SERVICE CENTER."

CLASS 1 LASER PRODUCT

This Compact Disc player is classified as a CLASS 1 LASER product. Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION :

CLASS 3B VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO THE BEAM (IEC 60825-1).

THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVER AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

CLASS 1	LASER PRODUCT
KLASSE 1	LASER PRODUKT
LUOKAN 1	LASER LAITE
KLASS 1	LASER APPARAT
PRODUCTO	LÁSER CLASE 1

Disc Markings

	Play Region Number
PAL	PAL broadcast system in U.K, France, Germany, etc.
DOLBY DIGITAL	Dolby Digital disc
STEREO	Stereo disc
DIGITAL SOUND	Digital Audio disc
MP3	MP3 disc

Region Number

Both the DVD player and the discs are coded by region. These regional codes must match in order for the disc to play. If the codes do not match, the disc will not play.
The Region Number for this player is described on the rear panel of the player.

DivX Certification

DivX®, DivX Certified® and associated logos are trademarks of Rovi Coorporation or its subsidiaries and are used under license.
ABOUT DIVX VIDEO : DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation.
This is an official DivX Certified® device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.
ABOUT DIVX VIDEO-ON-DEMAND : This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.
"DivX Certified to play DivX video, including premium content."
Covered by one or more of the following U.S patents : 7,295,673; 7,460,668; 7,515,710; 7,519,274.

Description

Front Panel Controls

DVD-E360K



DVD-E360



DVD-E350

1. **DISC TRAY**
   Place the disc here.
2. **DISPLAY**
   Operation indicators are displayed here.
3. **OPEN/CLOSE (⏏)**
   Press to open and close the disc tray.
4. **PLAY/PAUSE (▶II)**
   Play or pause the disc.
5. **POWER ON/OFF (⏻)**
   Turn on/off and the player is turned on/off.
6. **USB HOST (Only DVD-E360K,E360)**
   Connect digital still camera, MP3 player, memory stick, Card reader other removable storage devices.
7. **MIC (Only DVD-E360K)**
   Connect Microphone for karaoke functions.

Tour of the Remote Control

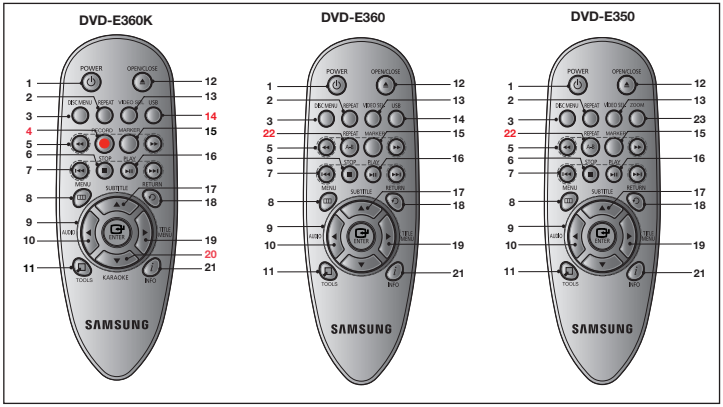

1. **DVD POWER Button**
   Turns the power on or off.
2. **REPEAT Button**
   Allows you to repeat play a title, chapter, track, or disc.
3. **DISC MENU Button**
   Brings up the Disc menu.
4. **RECORD Button (Only DVD-E360K)**
   Use to Karaoke recording.
5. **SEARCH Buttons (◀◀/▶▶)**
   Allows you to search forward/backward through a disc.
6. **STOP Button (■)**
   To stop the disc
7. **SKIP Buttons (⏮/⏭)**
   Use to skip the title, chapter or track.
8. **MENU Button**
   Brings up the DVD player's menu.
9. **ENTER/▲/▼,◀/▶ Buttons**
   This button functions as a toggle switch.
10. **AUDIO Button (◄)**
    Use this button to access various audio functions on a disc.
11. **TOOLS Button**
    Displays the current disc mode. It also lets you access the Display function.
12. **OPEN/CLOSE (⏏) Button**
    To open and close the disc tray.
13. **VIDEO SEL. Button**
    Changes video output mode.
14. **USB Button (Only DVD-E360K,E360)**
    To change device which access to USB device.
15. **MARKER Button**
16. **PLAY Button (▶II)**
    Begins disc play.
17. **SUBTITLE/(▲) Button**
18. **RETURN Button**
    Returns to a previous menu
19. **TITLE MENU Button (►)**
    Brings up the Title menu.
20. **KARAOKE (▼) Button (Only DVD-E360K)**
    To acces karaoke menu (keycon, mic volume, echo).
21. **INFO Button**
    Used to displays playback info banner.
22. **REPEAT A-B Button (Only DVD-E360,E350)**
    Allows you to repeat A-B disc.
23. **ZOOM Button (Only DVD-E350)**
    Enlarges the DVD Picture.

Connections

Choosing a Connection

The following shows examples of connections commonly used to connect the DVD player with a TV and other components.

Before Connecting the DVD Player

- Always turn off the DVD player, TV, and other components before you connect or disconnect any cables.
- Refer to the user's manual of the additional components you are connecting for more informa tion on those particular components.

A. Connecting to a TV (For Video)

1. Using video/audio cables, connect the **VIDEO (yellow)/AUDIO (red and white) OUT** terminals on the rear of the DVD player to the **VIDEO (yellow)/AUDIO (red and white) IN** terminals of TV.
2. Turn on the DVD player and TV.
3. Press the input selector on your TV remote control until the Video signal from the DVD player appears on the TV screen.

Note

- **Noise may be generated if the audio cable is too close to the power cable.**
- If you want to connect to an Amplifier, please refer to the Amplifier connection page.
- The number and position of terminals can vary depending on your TV set. Please refer to the user's manual of the TV.
- If there is one audio input terminal on the TV, connect it to the [AUDIO OUT][left] (white) terminal of the DVD player.
- If you press the VIDEO SEL. button when DVD Player is in stop mode or no disc is inserted, the Video Output mode changes in the following sequence: (I-SCAN → P-SCAN)

B. Connection to a TV (Interlace/Progressive)

1. Using component video cables, connect the **COMPONENT VIDEO OUT** terminal on the rear of the DVD player to the **COMPONENT IN** terminal of TV.
2. Using the audio cables, connect the **AUDIO (red and white) OUT** terminals on the rear of the DVD player to the **AUDIO (red and white) IN** terminals of TV. Turn on the DVD player and TV.
3. Press the input selector on your TV remote control until the Component signal from the DVD player appears on the TV screen.
4. Set the Video Output to **I-SCAN/P-SCAN** in the Display Setup menu. You can use the **VIDEO SEL.** button to change the Video Output mode.

Note

- What is "Progressive Scan"?
  Progressive scan has twice as many scanning lines as the interlace output method has. Progressive scanning method can provide better and clearer picture quality.

C. Connection to an Audio System (2 Channel Amplifier, Dolby Digital, or MPEG2)

1. Using the audio cables, connect the **AUDIO (red and white) OUT** terminals on the rear of the DVD player to the **AUDIO (red and white) IN** terminals of the Amplifier. If using a coaxial cable,

connect the **DIGITAL AUDIO OUT (COAXIAL)** terminal on the rear of the DVD player to the **DIGITAL AUDIO IN (COAXIAL)** terminal of the Amplifier.

2. Using the video signal cable(s), connect the **VIDEO** terminals on the rear of the DVD player to the **VIDEO** terminals of your TV
3. Turn on the DVD player, TV, and Amplifier.
4. Press the input select button of the Amplifier to select **external input** in order to hear sound from the DVD player. Refer to your Amplifier's user manual to set the Amplifier's audio input.

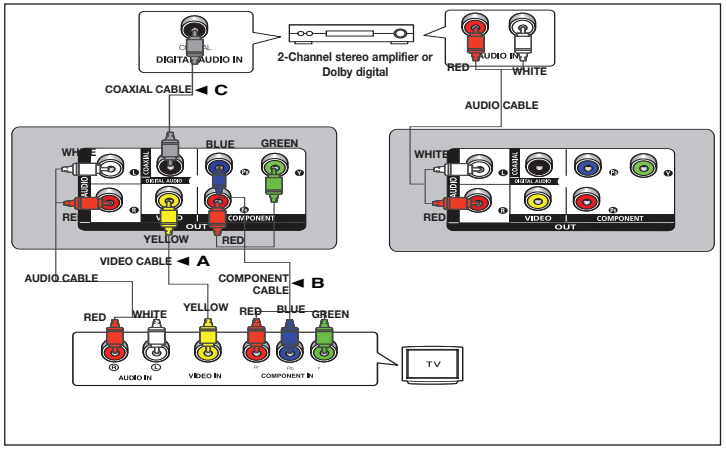

Basic functions

Playing a Disc

Before Play

- Turn on your TV and set it to the correct Video Input by pressing TV/VIDEO button on the TV remote control.
- If you connected an external Audio System, turn on your Audio System and set it to the cor rect Audio Input.

After plugging in the player, the first time you press the DVD POWER button, this screen comes up: If you want to select a language, press the ▲/▼ button, and then press the **ENTER** button. (This screen will only appear when you plug in the player for the first time.)If the language for the startup screen is not set, the set-tings may change whenever you turn the power on or off. Therefore, make sure that you select the language you want to use.Once you select a menu language, you can change it by pressing the ►II button on the front panel of the unit for more than 5 seconds with no disc in the unit. Then the **SELECT MENU LANGUAGE** window appears again where you can reset your preferred language.

Using the Search and Skip Functions

During play, you can search quickly through a chapter or track, and use the skip function to jump to the next selection.

Searching through a Chapter or Track

During play, press the SEARCH (◀◀ or ▶▶) button on the remote control for more than 1 second.

DVD	2X, 4X, 8X, 16X, 32X
CD	2X, 4X, 8X, 16X, 32X
VCD	4X, 8X

Note

- The speed marked in this function may be different from the actual playback speed.
- No sound is hearing during search mode (Except CD).

Skipping Tracks

During play, press the SKIP (I◀◀ or ▶▶I) button.

- When playing a DVD, if you press the SKIP (▶▶I) button, it moves to the next chapter. If you press the SKIP (I◀◀) button, it moves to the beginning of the chapter. One more press makes it move to the beginning of the previous chapter.
- When playing a VCD, if you press the SKIP (▶▶I) button, it moves to the next track. If you press the SKIP (I◀◀) button, it moves to the beginning of the track. One more press makes it move to the beginning of the previous track.
- If a track exceeds 5 minutes when playing a VCD and you press the ▶▶I button, it moves forward 5 minutes. If you press the I◀◀ button, it moves to the beginning of the track. One more press makes it move to the beginning of the previous track.

Using the Display Function

When Playing a DVD/VCD/MPEG4

1. During play, press the **TOOLS** button on the remote control.
2. Press the ▲/▼ buttons to select the desired item.
3. Press the ◄/► buttons to make the desired setup.
4. To make the screen disappear, press the **TOOLS** button again.

The Tool Button Display functions are listed in the table below.

	To access the desired title when there is more than one in the disc. For example, if there is more than one movie on a DVD, each movie will be identified.
	Most DVD discs are recorded in chapters (similar to tracks on an audio CD). Select this function to find and play a specific chapter.
	Allows playback of the film from a desired time. You must enter the starting time as a reference. The time search function does not operate on some discs.
	Lets you select the soundtrack language for a film. A DVD disc can have up to eight different soundtracks.
	Lets you select the subtitle language or, if you prefer, turn off subtitles. A DVD disc can have up to 32 different sets of subtitles, each in a different language.
	Lets you choose the EZ-View type
	Select to activate the Zoom function.
	Some DVDs have scenes that have been recorded at multiple angles. Use the Angle function to view a scene at one of those angles.

Using the Disc and Title Menu

During the playback of a DVD disc, press the **DISC MENU/TITLE MENU** button on the remote control.

Note
- Depending on a disc, the Disc Menu/Title Menu may not work.
- You can also use the Disc Menu, using the DISC MENU button on the remote control.
- Title Menu will only be displayed if there are at least two titles in the disc.

Repeat Play

Repeat the current track, chapter, title, a chosen section (A-B), or all of the disc.

When playing a DVD/VCD

1. Press the **REPEAT** button on the remote control. Repeat screen appears.
2. Press the **REPEAT** or ▲/▼ button to change playback mode. DVD repeats play by chapter or title.
   - Off.
   - Title : repeats the title that is playing.
   - Chapter : repeats the chapter that is playing.
   - Repeat A-B

Using the A-B Repeat function (Only DVD-E360K)

1. Press the REPEAT button on the remote control. The repeat screen appears.
2. Press the ▲/▼ button to select the REPEAT A-B and then press ENTER.
3. Press the **ENTER** at the point where you want repeat play to start (A).
4. Press the **ENTER** at the point where you want repeat play to start (B).

Using the A-B Repeat function (Only DVD-E360, E350)

1. Press the **REPEAT A-B** button on the remote control.
2. Press the **REPEAT A-B** button at the point where you want repeat play to start (A).
3. Press the **REPEAT A-B** button at the point where you want the repeat play to stop (B).

3. To return to normal play, press the **REPEAT A-B** button until the display shows Repeat : Off.

Note
- A-B REPEAT allows you to set point (B) directly after point (A) has been set.
- Depending on a disc, the Repeat function may not work.

Slow Play

This feature allows you slowly to repeat scenes con-taining sports, dancing, musical instruments being played etc., so you can study them more closely.

When playing a DVD

1. During play, press the **PLAY (▶II)** button.
2. Press the **SEARCH** (◀◀/▶▶) button to choose the play speed between 1/2, 1/4, 1/8,1/16 and so on. If you want to go normal play press PLAY button.

Advanced functions

Adjusting the Aspect Ratio (EZ View)

To play back using aspect ratio (DVD)

1. During play, press the **TOOLS** button on the remote control.
2. Press the ▲/▼ buttons to select icon. Each time you press the ◄/► buttons, the screen size changes. For graphics of the screen sizes and lists of the sequences in which the sizes change, see the next column.
3. Press the **RETURN** button to exit EZ View.

If you are using a 16:9 TV

For 16:9 aspect ratio discs
- WIDE SCREEN
- SCREEN FIT
- ZOOM FIT

For 4:3 aspect ratio discs
- Normal Wide
- SCREEN FIT
- ZOOM FIT
- Vertical Fit

If you are using a 4:3 TV

For 16:9 aspect ratio discs
- 4:3 Letter Box
- 4:3 Pan Scan
- SCREEN FIT
- ZOOM FIT

For 4:3 aspect ratio discs
- Normal Screen
- SCREEN FIT
- ZOOM FIT

Note
This function may behave differently depending on the type of disc.

Selecting the Audio Language

You can select a desired audio language quickly and easily with the AUDIO button.

Using the AUDIO (◄) button (DVD/VCD/MPEG4)

1. During play, Press the **AUDIO (◄)** button. Change the audio language by pressing the ▲/▼ button.
   - The audio languages are represented by abbreviations.
2. To remove the **AUDIO** icon, press the **RETURN** button.

Note
- This function depends on audio languages are encoded on the disc and may not work.
- A DVD disc can contain up to 8 audio languages.

Selecting the Subtitle Language

You can select a desired subtitle quickly and easily with the SUBTITLE/(▲) button.

Using the SUBTITLE (▲) button (DVD/MPEG4)

1. During play, Press the **SUBTITLE (▲)** button.
2. Press the **SUBTITLE (▲)** or ▲/▼ button to change the language. Each time you press the **SUBTITLE (▲)** or ▲/▼ button, the language changes.
3. To remove the **SUBTITLE** icon, press the **RETURN** button.

Note
- The subtitle languages are represented by abbreviations.
- You have to change the desired subtitle in the Disc Menu, according to discs. Press the DISC MENU button.
- This function depends on what subtitles are encoded on the disc and may not work on all DVDs.
- A DVD disc can contain up to 32 subtitle languages.

Changing the Camera Angle

When a DVD contains multiple angles of a particular scene, you can use the ANGLE function.

Using the ANGLE function (DVD)

If the disc contains multiple angles, the ANGLE appears on the screen.

1. During play, press the **TOOLS** button on the remote control.
2. Press the ▲/▼ buttons to select icon. When the angle screen is displayed, press the ◄/► buttons on the remote control to select the desired angle option.

Using the Bookmark Function

This feature lets you bookmark sections of a DVD or VCD (Menu Off mode) so you can quickly find them at a later time.

Using the Bookmark Function (DVD/VCD)

1. During play, press the **MARKER** button on the remote control.
2. When you reach the scene you want to mark, press the ◄/► or ▲/▼ buttons, and then press **MARKER** button. Up to 12 scenes may be marked at a time.

Note
- Depending on a disc, the Bookmark function may not work.

Recalling a Marked Scene

1. During play, press the **MARKER** button on the remote control.
2. Press the ◄/► or▲/▼ buttons to select a marked scene.
3. Press the **PLAY (▶II)** button to skip to the marked scene.

Clearing a Bookmark

1. During play, press the **MARKER** button on the remote control.
2. Press the ◄/► or▲/▼ buttons to select the bookmark number you want to delete.
3. Press the **ENTER** button to delete a bookmark number.

Using the Zoom Function

- Using the Zoom Function (DVD-E350)

1. During play or pause mode, press the **ZOOM** button on the remote control.

- Using the Zoom Function (DVD-E360,E360K)

1. During play or pause mode, press the **TOOLS** buttons on the remote control.
2. Press the ▲/▼ buttons to select icon, then press the **ENTER** button.
   - During DVD play, press ENTER to zoom in 1X/2X/3X/4X Normal in order.

Clips Menu for MP3/WMA/JPEG/MPEG4/CD Audio

CD Audio or discs with MP3/WMA/JPEG/MPEG4 contain individual songs and/or pictures that can be organized into folders as shown below. They are similar to how you use your computer to put files into different folders.

To go access these folders and the files in them, follow these steps :

1. Open the disc tray. Place the disc on the tray.
2. Close the tray. The tray closes and the Parent Folder Menu screen appears (top screen image.) Parent folders contain all the Peer folders that have the same kind of content: music, video, photos, etc.
3. Press the ◄/► buttons to select the Parent folder of your choice, and then press the **ENTER**. A screen displaying the Peer folders appears. The Peer folders contain all the folders with the same kind of content (video, music, photos, etc.) that are in the Parent folder.

Folder Selection

The folder can be selected both in Stop or Play mode.

- **To select the Parent Folder**
  Press the **RETURN** button to go to parent folder, or press the ▲/▼ buttons to select ".." and press **ENTER** to go to the parent folder.
- **To select the Peer Folder**
  Press the ▲/▼ buttons to select the desired folder, then press **ENTER**.
- **To select the Sub-Folder**
  Press the ▲/▼ buttons to select the desired folder, then press **ENTER**.

MP3/WMA/CD Audio Playback

1. Open the disc tray. Place the disc on the tray. Close the tray.
2. Press the ◄/► buttons to select a Music folder, and then press **ENTER**. Press the ▲/▼ buttons to select a song file, and then press the **ENTER** to begin playback of the song.

Repeat/Random playback

Press the **REPEAT** button to change the playback mode. There are four modes, such as **Off**, **Track**, **Folder** and **Random.**

- Off (⇉): Normal Playback
- Track (□): Repeats the current song file.
- Folder (▣): Repeats the song files which have the same extension in the current folder.
- Random (⇄): Song files which have the same extension will be played in random order.

To resume normal play, press the **REPEAT** button until the Repeat : Off.

CD-R MP3/WMA file

When you record MP3 or WMA files on CD-R, please refer to the following.

- **Your MP3 or WMA files should be ISO 9660 or JOLIET format.**
  ISO 9660 format and Joliet MP3 or WMA files are compatible with Microsoft's DOS and Windows, and with Apple's Mac. This format is the most widely used.
- **When naming your MP3 or WMA files, do not exceed 8 characters, and enter ".mp3, .wma" as the file extension.**
  General name format : Title.mp3. or Title.wma. When composing your title, make sure that you use 8 characters or less, have no spaces in the name, and avoid the use of special characters including: (.,/,\,=,+).
- **Use a decompression transfer rate of at least 128 Kbps when recording MP3 files.**
  Sound quality with MP3 files basically depends on the rate of compression/decompression you choose. Getting CD audio sound requires an analog/digital sampling rate, that is conversion to MP3 format, of at least 128 Kbps and up to 160 Kbps. However, choosing higher rates, like 192 Kbps or more, only rarely give better sound quality. Conversely, files with decompression rates below 128 Kbps will not be played properly.
- **Use a decompression transfer rate of at least 64Kbps when recording WMA files.**
  Sound quality with WMA files basically depends on the rate of compression/decompression you choose. Getting CD audio sound requires an analog/digital sampling rate, that is conversion to WMA format, of at least 64Kbps and up to 192Kbps. Conversely, files with decompression rates below 64Kbps or over 192Kbps will not be played properly. Sampling rate that can be supported for WMA files is > 30Khz.
- **Do not try recording copyright protected MP3 files.**
  Certain "secured" files are encrypted and code protected to prevent illegal copying. These files are of the following types: Windows Media™ (registered trade mark of Microsoft Inc) and SDMI™ (registered trade mark of The SDMI Foundation). You cannot copy such files.
- **Important:**
  The above recommendations cannot be taken as a guarantee that the DVD player will play MP3 recordings, or as an assurance of sound quality. You should note that certain technologies and methods for MP3 file recording on CD-Rs prevent optimal playback of these files on your DVD player (degraded sound quality and in some cases, inability of the player to read the files).
- This unit can play a maximum of 500 files and 500 folders per disc.

MPEG4 Playback

MPEG4 Play Function

AVI files are used to contain the audio and video data. Only AVI format files with the ".avi" extensions can be played.

1. Open the disc tray. Place the disc on the tray. Close the tray.
2. Press the ◄/► buttons to select a Videos Menu , then press the **ENTER**. Press the ▲/▼ to select an avi file (DivX) then press the **ENTER**.

Repeat and Repeat A-B playback

1. Press the **REPEAT** button , then press **REPEAT** or ▲/▼ buttons to change playback mode.

There are 3 modes, such as Off, Title and Folder.

- Off : No Repeat mode.
- Title : repeats the title that is playing.
- Folder : repeats the AVI files which have the same extension in the current folder.
- Repeat A-B

Repeat A-B playback (Only DVD-E360K)

1. Press the REPEAT button on the remote control. The repeat screen appears.
2. Press the ▲/▼ button to select the REPEAT A-B and then press ENTER.
3. Press the **ENTER** at the point where you want repeat play to start (A).
4. Press the **ENTER** at the point where you want repeat play to start (B).

Repeat A-B playback (Only DVD-E360, E350)

1. Press the **REPEAT A-B** button on the remote control.
2. Press the **REPEAT A-B** button at the point where you want repeat play to start (A).
3. Press the **REPEAT A-B** button at the point where you want the repeat play to stop (B)

- To return to normal play, press the **REPEAT A-B** button until the display shows Repeat : Off.

Note
- A-B REPEAT allow you to set point (B) directly after point (A) has been set.

MPEG4 Function Description

Function	Description
Skip (I◄◄ or ►►I)	During play, press the I◄◄ or ►►I button, it moves to next or previous track.
Search (◄◄ or ►►)	During play, press the SEARCH (◄◄ or ►►) button and press again to search at a faster speed. Allows you to search at a faster speed in an AVI file. (2X, 4X, 8X, 16X, 32X)

Slow Motion Play	During play, press the **PLAY** (**(▶II)** button, and then press the **SEARCH** (▶▶) button to view video at a slower speed. (1/2, 1/4, 1/8, 1/16)
ZOOM	X1/X2/X3/X4/Normal in order

- These functions may not work depending on MPEG4 file.

CD-R AVI fileThis
unit can play the following video compression formats within the AVI file format:
- DivX 3.11 contents
- DivX 4 contents (Based on MPEG-4 Simple Profile)
- DivX 5 contents (MPEG-4 simple profile plus additional features such as bi-directional frames. Qpel and GMC are also supported.)

DVD-RW & DVD+R

Format that support for DivX file :
- Basic DivX format DivX3.11 / 4.12/ 5.x
- DivX Pro
- File format : *.avi, *.div, *.divx.

This unit supports all resolutions up to maximum below.

DivX5
720 x 480 @30fps 720 x 576 @25fps: Maximum bitrate : 4Mbps

Possible warning messages that may appear when trying to play DivX/AVI files are :
1. No Authorization
   - File with bad registration code.
2. Unsupported Codec
   - Files with certain Codec Types, Versions (ex. MP4, AFS and other proprietary codecs) are not suppoerted by this player.
3. Unsupported Resolution
   - Files containing resolutions higher than the player's specification are not supported.

Note
- The resolution that can be supported by DVD-E360K,E360, E350 model up to 720 x 480 @30 frames/ 720 x 576 @25 frames.
- This unit supports CD-R/RW written in MPEG4 in accordance with the "ISO9660 format".

Playing Media Files Using the USB Host feature (Only DVD-E360K, E360)

You can enjoy the media files such as pictures, movies andtunes saved in an MP3 player, USB memory or digital camera in high audio by connecting the storage device to the USB port of the DVD Player.

Using the USB HOST feature

1. Connect the USB device to the USB port on the front of the unit.
2. The USB Menu screen appears. Press the ◀/▶ button to select Menu, then press **ENTER**.
3. Press the ▲/▼ buttons to select a file in the USB device. Press **ENTER** to Open the file.

Switching Between DVD and USB

If you have a disk in the player, and you are viewing or listening to files on a USB device, or the USB Menu is on the screen, you can switch from the USB device to the disc by pressing the USB button on the remote.

Also, you can switch from the disc to the USB device by pressing the USB button on the remote. "USB loading..." appears on the screen, and then the USB Menu appears.

Note
- Depends on the file size and clip duration, loading time on USB may take longer than using CD or DVD media.

Safe USB Removal
1. Press the USB button to return to disc mode or the main screen.
2. Press the STOP (■) button
3. Remove the USB cable.

Skip Forward/Back

During playback, press the (I◀◀/▶▶I) button.
- When there is more than one file, when you press the ▶▶I button, the next file is selected.
- When there is more than one file, when you press the I◀◀ button, the previous file is selected.

Fast playback

To play back the disc at a faster speed, press (◀◀/▶▶) during playback
- Each time you press either button, the playback speed will change as follows : 2X → 4X → 8X → 16X → 32X.

Compatible Devices

1. USB devices that support USB Mass Storage v1.0.(USB devices that operate as a removable disk in Windows (2000 or later) without additional driver installation.)
2. MP3 Player: Flash type MP3 player.
3. Digital camera: Cameras that support USB Mass Storage v1.0.
   - Cameras that operate as a removable disk in Windows (2000 or later) without additional driver installation.
4. USB Flash Drive: Devices that support USB2.0 or USB1.1.
   - You may experience a difference in playback quality when you connect a USB1.1 device.
5. USB card Reader: One slot USB card reader and Multi slot USB card reader
   - Depending on the manufacturer. the USB card reader may not be supported.
   - If you install multiple memory devices into a multi card reader, you may experience problems.
6. If you use a USB extension cable, the USB device might not be recognized.

Note
- CBI (Control/Bulk/Interrupt) is not supported.
- Digital Cameras that use PTP protocol or require additional program installation when connected to a PC are not supported.
- A device using NTFS file system is not supported. (Only FAT 16/32 (File Allocation Table 16/32) file system is supported.)
- Some MP3 players, when connected to this product,may not operate depending on the sector size of their file system.
- The USB HOST function is not supported if a product that transfers media files by its manufacturer-specific program is connected.
- Does not operate with Janus enabled MTP(Media Transfer Protocol) devices.
- The USB host function of this product does not support all USB devices.
- The USB Host does not support USB Hard Disc Drives (HDD).

CD Ripping (Only DVD-E360K, E360)

This feature allows you to copy audio files from a disc to a USB device in MP3 format**.**

Open the dics tray. Place the Audio CD(CD DA) disc on the tray, and close the tray. Connect the USB device to the USB port on the front of the unit. Press the USB button.

1. Press the **TOOLS** button to display the Ripping screen.
2. Press the ▲/▼ buttons, then press the **ENTER** button to select files for ripping.
   - To deselect files, press ENTER button again.

3. Press the ◄ and ▼ button to select **START**, then press the **ENTER** button begin ripping.
   The Ripping menu contain the following buttons :
   - Mode (Fast/Normal)
   - Bitrate, press ENTER to change : 128kbps → 192kbps → 128kbps.
     • Standard : 128kbps
     • Better Quality : 192kbps
   - Device selection, press ENTER to change between partitions on the USB device (max 4).
   - Select - Unselect, press ENTER to change from Select all (files) or Select none.

Note
- To cancel copying in progress, press the **ENTER** button.
- To return to the CDDA screen, press the TOOLS button again.
- While the CD is being ripped, the player will automatically enter stop mode.
- The ripping process is 2.6 times of normal speed.
- The DVD player can only rip Audio CD (CD DA) discs.
- The USB button does not work while you're in the Ripping menu.
- CD ripping function may not supported for some MP3 players device.

Picture CD Playback

1. Select the desired folder.
2. Press the ▲/▼ buttons to select a Picture file in the clips menu and then press the **ENTER** button.

Note
- Press the STOP button to return to the clips menu.
- When playing a Kodak Picture CD, the unit displays the Photo directly, not the clips menu.

Rotation
- Press the **TOOLS** button to select Rotate, and then press the **ENTER** button.
- Each time the ◄/► buttons are pressed, the picture rotates 90 degrees clockwise.
- Each time the ▲ button is pressed, the picture will reverse to the upside down to show a mirror image.
- Each time the ▼ button is pressed, the picture will reverse to the right side to show a mirror image.

Zoom
- Press the **TOOLS** button to select Zoom, and then press the **ENTER** button.
- Each time **ENTER** button is pressed, the picture is enlarged. Zoom mode : X1-X2-X3-X4-X1.
- Press the ◄/►/▲/▼ buttons to move the enlarged picture so you can view different portions.

Slide Show
- When you press the PLAY at JPEG file, it will go to full screen mode and automatically slide show.

Note
- Depending on a file size, the amount of time between each picture may be different from the manual.
- If you don't press any button, the slide show will start automatically in about 10 seconds by default.

CD-R JPEG Disc
- Only files with the ".jpg" and ".JPG" extensions can be played.
- If the disc is not closed, it will take longer to start playing and not all of the recorded files may be played.
- Only CD-R discs with JPEG files in ISO 9660 or Joliet format can be played.
- The name of the JPEG file may not be longer than 8 characters and should contain no blank spaces or special characters (. / = +).
- Only a consecutively written multi-session disc can be played. If there is a blank segment in the multi-session disc, the disc can be played only up to the blank segment.
- A maximum of 500 images can be stored on a single CD.
- Kodak Picture CDs are recommended.
- When playing a Kodak Picture CD, only the JPEG files in the pictures folder can be played.
- Kodak Picture CD: The JPEG files in the pictures folder can be played automatically.
- Konica Picture CD: If you want to see the Picture, select the JPEG files in the clips menu.
- Fuji Picture CD: If you want to see the Picture, select the JPEG files in the clips menu.
- QSS Picture CD: The unit may not play QSS Picture CD.
- If the number of files in 1 Disc is over 500, only 500 JPEG files can be played.
- If the number of folders in 1 Disc is over 500, only JPEG files in 500 folders can be played.

Karaoke functions (Only DVD-E360K)

Karaoke Functions

Operation Sequence
1. Connect the terminals Mixed Audio Out to TV or Amplifier.
2. Connect the microphone plug to Mic (microphone) and set Karaoke score to On. When MIC is connected and Karaoke score is On, the karaoke functions can be used.

Echo/Microphone Volume/Key Control (Tone control)
1. Play the karaoke disc containing the songs you want.
   - Press the **KARAOKE (▼)** button, and then press ▲/▼ to select **ECHO**, **VOL** or **KEY**.
2. Press the ◄/► buttons to change the desired item.

Karaoke Scoring (Score)

The scoring will appear as :
1. The microphone is connected and Karaoke score is On.
2. At the end of each chapter/title of karaoke disc.
   - If the DVD karaoke have any information on the scoring drive.
   - In case of VCD, the device can not differentiate between hard karaoke or movies, then the scoring will always appear.
3. Karaoke score will appear at the end of time for each chapter/title for about 6s.

Karaoke Sound Recording
1. Insert USB storage media into USB jack and then connected the microphone plug to Mic.
2. To star karaoke recording, choose one of VCD/DVD/SVCD file, then press **RECORD** button.
3. When recording, user can only press **STOP** button and **PAUSE** button to cancel the recording.
4. If user do cancelation, then file result will be saved.

Note
- If you hear feedback(squealing or howling) while using the karaoke feature, move the microphone away from the speakers or turn down the microphone volume or the speaker volume.
- When playing MP3, WMA and LPCM disc, the karaoke functions will not operate.
- When the MIC is connected, Digital Out does not work.
- The MIC sound outputs only from Analog Audio Out.
- If MIC is connected to the MIC jack on the front panel, 5.1CH audio will be changed in to 2 CH audio automatically, this condition can't be change unless the MIC is plugged out.

MY KARAOKE

My Karaoke is the feature that makes non karaoke VCD/DVD can be used like karaoke disc, by removing lead singer vocal sound.

Using the My Karaoke feature :

1. Connect the microphone.
2. Choose My Karaoke setting in Setting --> Audio --> My Karaoke and then select one of three enable mode :
   - Original Vocal : This setting will keep the original vocal sound.
   - Min. Reduction : this setting reduce the main vocals sound sligthly.
   - Max. Reduction : This setting will reduce the main vocals sound greatly
3. Insert and play DVD or VCD media, this feature only for VCD/DVD non karaoke type.

Note
1. Feature will disabled when :
- Removing the microphone, or
- Changing "My Karaoke" settings to "Original Vocals" or
- Playing Karaoke audio, or
- Playing non supported file type (ex : *.avi: *.mp3; *.divx; etc)
2. No pop-up notification when feature disabled.

Changing setup menu

Using the Setup Menu

The Setup menu lets you customize your DVD player by allowing you to select various language preferences, set up a parental level, even adjust the player to the type of television screen you have.

1. With the unit in Stop mode, press the **MENU** button on the remote control. Press the ◄/► buttons to select **SETTINGS**, then press the **ENTER** button.
2. Press the ▲/▼ buttons to select a Setup Menu, then press the ► or **ENTER** to bring up the sub-menu.
3. Press the ▲/▼ buttons to select a sub-menu option, then press the ► or **ENTER**.
4. To make the setup screen disappear after setting up, press the **RETURN** button.

Setting Up the Display Options

Display options enable you to set various video functions of the player.

1. With the unit in Stop mode, press the **MENU** button. Press the ◄/► buttons to select **SETTINGS**, then press the **ENTER** button.
2. Press the ▲/▼ buttons to select **DISPLAY**, then press the ► or **ENTER** button.
3. Press the ▲/▼ buttons to select the desired item, then press the ► or **ENTER** button.

Note
- **Consult your TV User's Manual to find out if your TV supports Progressive Scan. If Progressive Scan is supported, follow the TV User's Manual regarding Progressive Scan settings in the TV's menu system.**
- **If Video Output is set incorrectly, the screen may be blocked.**
- **When the resolution is changed during playback, it may take a few seconds for a normal image to appear.**

Setting Up the Audio Options

Audio Options allows you to setup the audio device and sound status settings depending on the audio system in use.

1. With the unit in Stop mode, press the MENU button. Press the ◄/► buttons to select **SETTING**, then press the **ENTER** button.
2. Press the ▲/▼ buttons to select **AUDIO**, then press the ► or **ENTER** button.
3. Press the ▲/▼ buttons to select the desired item, then press the ► or **ENTER** button.

Note :
- When play a disc that has MPEG Audio and you have Bitstream selected in the Audio Options menu, the Digital Audio jack may not output audio
- There is no analogue audio output when you play a sound disc.
- Even when PCM Down sampling is Off
  - Some discs will only output down sampled audio through the digital outputs.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

Setting Up the System Options

1. With the unit in Stop mode, press the **MENU** button. Press the ◄/► buttons to select **SETTINGS**, then press the **ENTER** button.
2. Press the ▲/▼ buttons to select **SYSTEM**, then press the ► or **ENTER** button.
3. Press the ▲/▼ buttons to select the desired item, then press the ► or **ENTER** button.

Setting Up the Language Features

If you set the player menu, disc menu, audio and subtitle language in advance, they will come up automatically every time you watch a movie.

1. With the unit in Stop mode, press the **MENU** button. Press the ◄/► buttons to select **SETTINGS**, then press the **ENTER** button.
2. Press the ▲/▼ buttons to select **LANGUAGE**, then press the ► or **ENTER** button.
3. Press the ▲/▼ buttons to select the desired language, then press the ► or **ENTER** button.

Note

- The language is selected and the screen returns to Language Setup menu.
- To make the setup menu disappear, press the MENU button.
- If the selected language is not recorded on the disc, the original pre-recorded language is selected.
- Select “Original” if you want the defaultsoundtrack language to be the original language the disc is recorded in.
- Select “Automatic” if you want the subtitle language to be the same as the language selected as the audio language.
- Some discs may not contain the language you select as your initial language; in that case the disc will use its original language setting.

Setting Up the Security Options

The Parental Control function works in conjunction with DVDs that have been assigned a rating, which helps you control the types of DVDs that your family watches. There are up to 8 rating levels on a disc.

Setting Up the Rating Level

1. With the unit in Stop mode, press the **MENU** button. Press the ◄/► buttons to select **SETTINGS**, and then press the **ENTER** button.
2. Press the ▲/▼ buttons to select **SECURITY**, and then press the ► or **ENTER** button.
3. The first time you access security, you must enter the default password: 0000. To enter the default password, highlight 0 on the screen and press the **ENTER** button 4 times. To change the default password.
4. Press the ▲/▼ buttons to select **PARENTAL**, and then press the ► or **ENTER** button.
5. Press the ▲/▼ buttons to select the rating level you want, and then press the **ENTER** button. The higher the rating level, the more mature the allowable content.
   - If you select the Kid Safe level, discs rated level 2 or higher will not play unless you enter the password.

Security Levels :

❶ **KID SAFE**
❷ **G** (General Audiences) : All Ages Admitted
❸ **PG** (Parental Guidance suggested) : Some material may not be suitable for young children.
❹ **PG 13** (PG-13 Parents strongly cautioned) : Some material may be inapproriate for children under 13.
❺ **PGR** (Parental Guidance Recommended) : These are not necessarily unsuitable for children, but viewer discretion is advised, and parents and guardians are encouraged to supervise younger viewers.
❻ **R** (Restricted) : Under 17 requires accompanying adult
❼ **NC17** (NC-17) : No one 17 and under admitted.
❽ **ADULT**

Note:

- If you have forgotten your password, see “Forgot Password” in the Troubleshooting Guide.

Changing the Password

To change the password, follow these steps:

1. On the Settings Menu, Select **Security**, and then press the **ENTER** button.
2. Enter the current 4 digit password. If you have never changed the password, enter the default password: 0000. To enter a number, use the ◄/►/▲/▼ buttons to highlight a number, and then press the **ENTER** button.
3. Select **Change Password**, and then press the **ENTER** button.
4. Enter the new 4 digit password. Use the ◄/►/▲/▼ buttons to select a number, and then press the **ENTER** button. Repeat 4 times.
5. Re-enter the new password in the same manner to confirm. The Security menu re-appears.

Setting Up the General Options

1. With the unit in Stop mode, press the **MENU** button. Press the ◄/► buttons to select **SETTINGS**, then press the **ENTER** button.
2. Press the ▲/▼ buttons to select **GENERAL**, then press the ► or **ENTER** button.
3. Press the ▲/▼ buttons to select the desired item, then press the ► or **ENTER** button.

Setting Up the Support Options

Support option enable you to check your DVD player information such as the model code, Software Version, The serial and version numbers can be found on the back side of your DVD-Player.

1. With the unit in Stop mode, press the **MENU** button. Press the ◄/► buttons to select **SETTINGS**, then press the **ENTER** button.
2. Press the ▲/▼ buttons to select **SUPPORT**, then press the ► or **ENTER** button.
3. Select **PRODUCT INFORMATION**, then press the ► or **ENTER** button.

Troubleshooting

Before requesting service (troubleshooting), please check the following.

Problem	Action
The screen is blocked.	• Press the ►II button (in front panel) for more than 5 seconds under no disc inside. All setting will revert to factory settings.
Forgot password.	• Press the ►II button (in front panel) for more than 5 seconds under no disc inside. All setings including the password will revert to the factory settings. Don't use this unless absolutely necessary.

Spesifications

General	**Power Requirements**	AC110~240V, 50/60Hz
	Power Comsumption	For the power supply and power consumption, refer to the label attached to the product
	Weight	1.10 Kg
	Dimensions	300mm(W) X 208mm(D) X 42mm(H)
	Operating Temperature Range	+5ºC to +35ºC
	Operating Humidity Range	10 % to 75 %
Video Output	**Composite Video**	1 channel : 1.0 Vp-p (75 Ω load)
	Component Video	Y : 1.0 Vp-p (75 Ω load) Pr : 0.70 Vp-p (75 Ω load) Pb : 0.70 Vp-p (75 Ω load)
Audio Output	**Output terminal**	2 CH
	Maximum Output Level	2Vrms
	Frequency Response	20 Hz to 20 kHz
	Digital Audio Out	Coaxial terminal (S/PDIF)

Memo

Memo

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care centre.

Area	Contact Centre ☎	Web Site
▪ Asia Pacific		
AUSTRALIA	1300 362 603	www.samsung.com
NEW ZEALAND	0800 SAMSUNG (0800 726 786)	www.samsung.com
CHINA	400-810-5858	www.samsung.com
HONG KONG	(852) 3698 4698	www.samsung.com/hk www.samsung.com/hk_en/
INDIA	1800 1100 11 3030 8282 1800 3000 8282 1800 266 8282	www.samsung.com
INDONESIA	0800-112-8888 021-5699-7777	www.samsung.com
MALAYSIA	1800-88-9999	www.samsung.com
PHILIPPINES	1-800-10-SAMSUNG(726-7864) for PLDT 1-800-3-SAMSUNG(726-7864) for Digitel 1-800-8-SAMSUNG(726-7864) for Globe 02-5805777	www.samsung.com
SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com
THAILAND	1800-29-3232 02-689-3232	www.samsung.com
TAIWAN	0800-329-999 0266-026-066	www.samsung.com
VIETNAM	1 800 588 889	www.samsung.com

Area	Contact Centre ☎	Web Site
▪ Middle East		
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com
OMAN	800-SAMSUNG (726-7864)	www.samsung.com
KUWAIT	183-2255	www.samsung.com
BAHRAIN	8000-4726	www.samsung.com
Egypt	08000-726786	www.samsung.com
JORDAN	800-22273	www.samsung.com
IRAN	021-8255	www.samsung.com
Morocco	080 100 2255	www.samsung.com
Saudi Arabia	9200-21230	www.samsung.com
▪ Africa		
NIGERIA	0800-726-7864	www.samsung.com
Ghana	0800-10077 0302-200077	www.samsung.com
Cote D' Ivoire	8000 0077	www.samsung.com
Senegal	800-00-0077	www.samsung.com
Cameroon	7095- 0077	www.samsung.com
KENYA	0800 724 000	www.samsung.com
UGANDA	0800 300 300	www.samsung.com
TANZANIA	0685 88 99 00	www.samsung.com
SOUTH AFRICA	0860-SAMSUNG(726-7864)	www.samsung.com

ENERGY STAR

DVD-E360K
DVD-E360
DVD-E350

SAMSUNG

جهازشغيل ديفيدي

دليل المستخدم

صوّر الإمكانيات

شكرا لكم على شراء منتج سامسونج.

لاستلام أفضل الخدمة،

الر جاء تسجيل منتخكم في

www.samsung.com/register

العربية

AK68-02208A-00

الاحتياطات

١. الإعداد

- يُرجى الرجوع إلى ملصق التعريف الموجود بالجزء الخلفي من المشغل لمعرفة درجة الفولتية الصحيحة للتشغيل.
- قم بتركيب المشغل في صندوق مزود بفتحات تهوية كافية. (٧ إلى ١٠ سم) تجب عدم سد فتحات التهوية الخاصة بأي من المكونات للسماح بدوران الهواء.
- تجب عدم دفع درج الأقراص إلى الداخل يدويًا.
- يجب عدم تكدس المكونات.
- تأكد من إيقاف تشغيل جميع المكونات قبل تحريك المشغل.
- تأكد من إيقاف تشغيل المكونات الأخرى قبل توصيلها بهذا المشغل.
- تأكد من إخراج القرص وإيقاف تشغيل المشغل بعد الانتهاء من الاستخدام، ولا سيما إذا كنت تعتزم عدم استخدامه لفترة طويلة.
- يتم استخدام مقبس الطاقة الرئيسي كجهاز فصل ويجب أن يظاهرأفي أي وقت.

٢. لسلامتك

- يستخدم هذا المنتج شعاع الليزر. وقد يؤدي استخدام عناصر التحكم أو التعدلات أو أداء الإجراءات غير تلك المبينة هنا إلى التعرض للإشعاع بسكل خطير.
- تجب عدم فتح الأغطية وإجراء عمليات الإصلاح بنفسك. اترك أعمال الصيانة لفنيين مؤهلين فقط.

٣. تنبية

- لم يتم تصميم المشغل ليتم استخدامه في أغي أغر اض صناعية ولكن لأغراض منزلية. هذا المنتج للاستخدام الشخصي فقط.
- يجب عدم تعرض الجهاز لقطرات الماء أو رذاذ الماء كما لا يجب أن يوضع عليه أشياء تحتوي على سوائل مثل آنية الزهور.
- يمكن ان تؤثر العوامل الخارجية كالإبرق والكهرباء الساكنة على التشغيل الطبيعي لهذا المشغل. إذا واجهت هذه المشكلة، فقم بإيقاف تشغيل المشغل ثم أعد تشغيله بالاضغط على الزر POWER، أو افصل سلك التيار الكهربي المتردد ثم أعد توصيله بمنفذ التيار الكهربي المتردد. سيعمل المغل على نحو طبيعي.
- في حالة حدوث تكاثف داخل المشغل نتيجة حدوث تغييرات شديدة في درجاتالحرارة، ربما لا يعمل المشغل في درنحو سليم. في حالة حدوث هذه المشكلة، اترك المشغل في درجة حرارة الغرفة حتى يصبح الجزء الداخلي من المشغل جافًا ومستعدًا للعمل.

٤. القرص

- يجب عدم تنظيف القرص باستخدام مواد الرش الخاصة بمسح التسجيلات أو البنزين أو سائل تخفيف الدهان أو غيرها من المذيبات المتطايرة الأخرى والتي قد تتسبب في حدوث تلف بسطح القرص.
- يجب عدم لمس سطح إشارات القرص. امسك القرص من إحدى الحواف والفتحة الموجودة بلامنتصف.
- امسح الأتربة برفق ولا تقم مطلقًا المسح مستخدمًا قطعة قماش ذهابًا وإيابًا فوق القرص.

٥. المعلومات البيئية

- تحتوي البطارية المستخدمة في هذا المنتج على مواد كيماوية ضارة بالبيئة.
- لذا، يُرجى التخلص من البطارتات بالاطريقة الصحيحة، وفقًا للقوانين الفيدرالية والدولية والمحلية.

وحدة المنتج المرفقة بهذا الدليلمرخصة وفقًا لحقوق ملكية فكرية محددة لشركات أطراف أخرى. يقتصر هذا الترخيص على الاستخدام الخاص غير التجاري بواسطة العميل النهائي المنتفع من المحتويات المُرخصة. ولا توجد حقوق ممنوحة لاستخدام هذا الجهاز لأغراض تجارية. لا يغطي هذا الترخيص أي وحدة منتج أخرى بخلاف هذه الوحدة، وكذلك لا يشمل الترخيص أي وحدة منتج أو عملية غير مرخصة تطابق ISO/OUR 11172-3 أو ISO/OUR 13818-3 الترخيص فقط استخدم أم تباع مرفقة بوحدة المنتج الحالية. كذلك يغطي الترخيص فقط استخدام وحدة المنتج الحاليه لتشفير و/أو فك تشفير ملفات الصوت التي تتطابق مع ISO/OUR 11172-3 أو ISO/OUR 13818-3. لم يتم منح حقوق بموجب هذا الترخيص فيما يتعلق بميزات المنتج أو وظائفه التي لا تطابق ISO/OUR 11172-3 أو ISO/OUR 13818-3.

تنبيه : قد يؤدي استخدام أزرار التحكم أو إعدادات الضبط أو تنفيذ إجراءات بخلاف الواردة بهذا الدليل إلى التعرض للإشعاع الخطير.

جدول المحتويات

الاحتياطات ٢
الإعداد
ميزات عامة ٢
الوصف ٣
استكشاف وحدةالتحكم عن بُعد ٤
التوصيلات
اختيار إحدى التوصيلات ٤
الوظائف الأساسية
تشغيل القرص ٥
استخدام وظيفتي البحث والتخطي ٥
استخدام وظيفة العرض ٥
استخدام قائمتي العناوين والأقراص ٦
تكرار التشغيل ٦
التشغيل البطيء ٦
الوظائف التقدمة
ضبط نسبة الارتفاع إلى العرض (EZ VIEW) ٦
تحديد لغة الصوت ٧
تحديد لغة الترجمة الصاحبة ٧
تغيير زاوية الكاميرا ٧
استخدام وظيفة العلامات ٧
استخدام وظيفة التكبير/التصغير ٧
قائمة القاطع ملفات MP3/WMA/MPEG4/JPEG/قرص الضغوط ٧
تحديد انجلد ٧
تشغيل صوت MP3/WMA/القرص المطغوط ٨
تشغيل MPEG4 ..... ٨
تشغيل ملفات الوسائط باستخدام ميزة مضيف USB (DVD-E360K, E360) ٩
النسخ من القرص المُدمج (DVD-E360K, E360) ٩
تشغيل القرص الذي يتضمن صور ١٠
وظائف كاروكي (DVD-E360K)
وظائف كاروكي ١٠
تغيير Setup Menu
استخدام Setup Menu ١١
ضبط خيارات العرض ١١
ضبط خيارات الصوت ١١
ضبط خيارات النظام ١١
ضبط ميزات اللغة ١١
ضبط خيارات الحماية ١١
ضبط خيارات العامة ١٢
ضبط خيارات الدعم ١٢
الرجع
استكشاف الأخطا وإصلاحها ١٣
لمواصفات ١٣

الإعداد

ميزات عامة

صوت ممتاز

تمنح تقنية Dolby Digital وهي تقنية تم تطويرها من قبل شركة Dolby Laboratories صوتًا فائق الوضوح.

الشاشة

يمكن عرض صور الشاشة العريضة (٩:١٦) والعادية على حد سواء.

الحركة البطيئة

يمكن عرض أحد المشاهد الهامة بالحركة البطئة.

تحكم الآباء (DVD)

تتيحوظيفة تحكم الآباء للمستخدمين ضبط المستوى اللازم لمنع الأطفل من مشاهدة الأفلام الضارة كتلك التي بها مشاهد عنف أو التي تتناول أحد الموضوعات الخاصة بالكبار وما إلى ذلك.

وظائف قائمة الشاشة المتعددة

يمكن اختيار العديد من بين اللغات (الترجمة المصاحبة/الصوت) وزوايا الشاشة أثناء الاستاع بمشاهدة الأفلام.

الاستعراض المتقدم

تعمل ميزة الاستعر اض المتقدم على إنشاء صورة محسنة ذات خطوط استعر اض ضعف خطوط الاستعراض الخاصة بصورة متداخلة تقليدية.

EZ VIEW (DVD)

يتيح العرض السهل ضبط الصورة بخيث تتناسب مع حجم شاشة ٩:١٦ أو ٣:٤).

عارض الصور الفوتوغرافية الرقمية (JPEG)

تستطيع عرض صور فوتوغر افية رقمية على جهاز التليفزيون.

Repeat

يمكنك تكرار أغنية أو فيلم بمجرد الضغط على الزر REPEAT.

MP3/WMA

يمكن لهذه الوحدة تشغيل أقر اص تم إنشاؤ ها من ملفات MP3/WMA.

MPEG4

يستطيع هذا الجهاز تشغيل الملفات ذات تنسيق MPEG4 داخل ملف AVI.

النسخ من القرص المُدمَج (DVD-E360K, E360)

تتيح لك هذه الميزة نسخ ملفات الصوت من القرص إلى جهاز USB بتنسيق MP3. (الأقراص المدمجة الصو تية فقط (CD DA)).

ملاحظة

- الأقراص التي لا يمكن تشغيلها مع هذا المسغل.
  - DVD-ROM • DVD-RAM
  - CD-ROM • CDV
  - CDI • CVD
- ربما تتوقف القدرة على التسغيل على ظروف التسجيل.
  - DVD-R أو DVD+R •
  - CD-RW •
  - أقراص DVD+RW أو DVD-RW (وضع V) •
- قد تتمكن الوحدة من شغيل بعض أقراص CD-R و CD-RW و DVD-R تسبب نوع القرص أو ظروف التسجيل.

الحمايةُ من النسخ

يوجد العديد من أقراص DVD المزودة بشفرة للحماية من النسخ. ولهذا السبب، يجب عليك فقط توصيل مشغل أقراص DVD مباشرة بجهاز التلفاز وليس بأحد أجهزة الفيديو. حيث ينتج عن توصيل هذه الوحدة بجهاز فيديو ظهور صورة مشوهة من أقراص DVD المحمية ضد النسخ.

يتضمن هذا البند تقنية حماية ضد النسخ وهي محمية بموجب حقوق البر اءات وحقوق الملكية الفكرية الأخرى بالولايات المتحدة الأمريكية وكذلك حقوق شركة ROVI. يُمنع منعاً باتاً القيام بهندسة عكسية أو التفكيك

مخرجات الاستعراض المتقدم (576p)

"يتعين على المستلكين الانتباه إلى أنه ايست كل أجهزة التلفازات در جة الوضوح العالية متوافقة تمامًا مع هذا المنتج وقد تتسبب في ظهور عيوب مرئية في الصورة. في حالة ظهور مشكلات في صور الاستعراض المتقدم في الوضعين 576 يُوصى أن يقوم المستخدم بتبديل الوصلة إلى خرج "التعريف القياسي". إذا كانت لديك أية اسئلة تتعلق بتوافق جهاز التلفاز مع هذا الطراز من مشغل أقراص DVD 576p، يُرجى الاتصال بمركز خدمة العملاء الخاص بـ SAMSUNG."

مُنتج ليْزرمن الفئة 1

تم تصنيف مشغل الأقراص صغيرالحجم هذا كمنتج ليزر من الفئة 1. قد يؤدي استجدام عناصر التحكم أو إجراء تعد يلات أو القيام بإجراء ات غيرتلك المحددة في هذا الدليل إلى التعرض لإشعاع خطير.

تنبيه :

تنبعث أشعة ليزر مرئية وغيرمرئية من الفئة ب3 عند الفتح. تجنب التعرض لأشعة الليزر (1-IEC 60825).

هذا المنتج يستخدم أشعة الليزر. قد يؤدي استخدام عناصرأو القيام بإجراءات غيرتلك المحددة في هذا الدليل إلى التعرض لأشعاع خطير. لا تفتح الغطاء ولا تحاول إصلاح الجهاز بنفسك. اترك أعمال الصيانة للفنيين المؤهلين.

CLASS 1	LASER PRODUCT
KLASSE 1	LASER PRODUKT
LUOKAN 1	LASER LAITE
KLASS 1	LASER APPARAT
PRODUCTO	LÁSER CLASE 1

علامات القرص

رمز منطقة التشغيل	
نظام بث PAL في الممكة المتحدة وفرنسا وألمانيا وما إلى ذلك.	PAL
قرص دولبي الرقمي	DOLBY DIGITAL
قرص استريو	STEREO
قرص الصوت الرقمي	DIGITAL SOUND
قرص MP3	MP3

رقم المنطقر

يتم ترميز كل من أقراص ومشغل أقراص DVD حسب المنطقة. ولابد أن تتوافق رموز المناطق حتى يمكن تشغيل القرص. في حالة عدم توافق الرموز، لن يتم تشغيل القرص. ويمكن العثر على رمز المنطقة لهذا المشغل على اللوحة الخلفية.

عتماد DivX

تعتبر®DivX و®DivX Certified و تجارية مسجلة لشركة Corporation والشعارات المرتبطة علامات Rovi أوالشركات التابعة لها ويتم استخدامها بموجب الترخيص.

ويعدهذا المشغل جهازًا رسميًا معتمدًا مب ®DivX Certified ويقوم بتشغيل الفيديوبتنسيق DivX.

قم بزيارة الموقع الإلكتروني www.divx.com لمزيدمن المعلومات وأدوات البرامج لتحويل ملفاتك الى فيديو DivX.

نبذةعن DIVX VIDEO-ON-DEMAND: هذا الجهازالمرخص به من قبل ®DivX Certified يجب تسجيله لتشغيل محتويات DivX Video-on-Demand (VOD) التي يتم شراؤها.

للحصول على رمز التسجيل ,حدد قسم DivX VOD في قائمة إعداد الجهاز.اذهب إلى vod.divx.com لمزيد من المعلومات حول طريقة استكمال تسجيلك.

هذا الجهازمرخص به من قبل ®DivX Certified لتشغيل فيديو®DivX حتى بما في ذلك المحتويات المميزة.

نبذة عن DivX Video : ®DivX تنسيق فيديوقمي أنشأته شركة DivX, LLC التي تعتبرشركة تابعة لشركة Rovi.

مغطى بواحدة أوأكثر من براءات الاختراع الأمريكية التالية : 7295673 : ، 7,460,668، 7,515,710، 7,519,274

الوصف

أزرار تحكم اللوحة الأمامية

DVD-E360K



DVD-E360

DVD-E350

١ . درج الأقراص
ضع القرص هنا.

٢. DISPLAY
اضغط على هذا الزر لفتح درج الأقراص وإغلاقه.

٣. OPEN/CLOSE (⏏)
اضغط على هذا الزر لفتح درج الأقراص وإغلاقه.

٤. PLAY/PAUSE (⏯)
لبدء تشغيل القرص أو إيقاف تشغيله مؤقتًا.

٥. POWER ON/OFF (⏻)
قم بالتشغل/إيقاف التشغيل وسيتم تشغيل/إيقاف تشغيل المشغل.

٦. مضيف USB (DVD-E360K,E360)
توصيل كاميرا الصور الثابتة الرقمية أو مشغل MP3 أو بطاقة الذاكرة أو قارئ البطاقة أو وحدات التخزين الأخرى القابلة للإزالة.

٧. MIC (DVD-E360K)
لتوصيل الميكروفون لتشغيل وظائف كاروكي.

استكشاف وحدةالتحكم عن بُعد

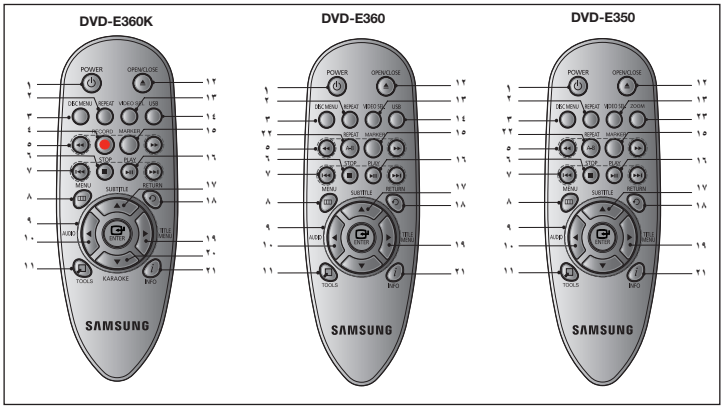

١. **الزر POWER لمشغل أقراص DVD**
لتشغيل الوحدة أو إيقاف تشغيلها.

٢. **زر REPEAT**
يتيح هذا الزر تكرار تشغيل عنوان أو فصل أو مادة مسجلة أو قرص.

٣. **زر DISC MENU**
لاظهار قائمة الاقراص

٤. **زر RECORD (DVD-E360K)**
تستخدم للسجيل بطر يقة كاريو كي

٥. **زرا SEARCH (◄◄/►►)**
يتيحان لك البحث إلى ذلأمام/الخلف خلال القرص.

٦. **زر STOP (■)**

٧. **زرا SKIP (I◄◄/►►I)**
يستخدمان لتخطي العنوان الفصل أو المدة المسجلة.

٨. **زر MENU**
لإظهار قائمة مشغل أقراص DVD.

٩. **أزرار/▼/▲/► ◄/ ENTER**
يعمل هذا الزر كمفتاح تبديل.

١٠. **زر AUDIO (◄)**
استخدم هذا اللوصول إلى وظائف الصوت المتعددة الموجودة على القرص.

١١. **زر TOOLS**
لعرض وضع القرص الحالي لعرض شريط
يستخدم معلومات التشغيل

١٢. **زر OPEN/CLOSE (▲)**
لفتح درج الأقراص وإغلاقه.

١٣. **الزر .VIDEO SEL**
لتغيير وضع خرج الفيديو.

١٤. **زر USB (DVD-E360K,E360)**
لتكبير صورة DVD.

١٥. **زر العلامة (MARKER)**

١٦. **زر (►II) PLAY**
لبدء التشغيل.

١٧. **زر (▲) SUBTITLE**

١٨. **زر RETURN**
للرجوع إلى قائمة سابقة.

١٩. **زر (►) TITLE MENU**
لاظهار قائمة العناوين.

٢٠. **زر KARAOKE (▼) (DVD-E360K)**
للوصول إلى قائمة كاريوكي.(echo، mic vol، keycon)

٢١. **زر INFO**
.كما يسمح لك أيضا باستخدام وظيفة العرض (Display).

٢٢. **زر REPEAT A-B (DVD-E360, E350)**

٢٣. **زر ZOOM (DVD-E350)**

التوصيلات

اختيار إحدى التوصيلات

تعرض التالية توصيلات شائعة الاستخدام لتوصيل مشغل اقراص DVD بجهاز التلفاز و المكونات الأخرى.

قبل توصيل مشغل DVD

- تأكد دائمًا من إيقاف تشغل أقراص DVD والتلفاز والمكونات الأخرى قبل توصيل أي كابلات أو فصلها.
- يرجى الرجوع إلى دلل المستخدم للمكونات الإضا فية التي تقوم بتوصيلها للحصول على مزيدٍ من المعلومات حول تلك المكونات الخاصة.

A. التوصيل بجهز تافاز (للفيديو)

١. باستخدام كابلات الصوت/الفيديو،قم بتوصيل طر في التوصيل **VIDEO (الأصفر)/AUDIO OUT (الأبيض والأحمر)** بالجز ء الخلفي من مشغل أوأقراص 5.1 (القناة 5.1CH و الأبيض) الخاص أقراص DVD بطرفي توصيل **VIDEO (الأصفر)/AUDIO IN (الأبيض والأحمر)** بجهاز التلفاز.

٢. قم بتشغيل مشغل أقراص DVD و التلفاز.

٣. اضغط على محدد الدخل بوحدة التحكم عن بعد الخاصة بالتليفزيون حتى تظهر إشارة الفيديو الصادرة من مشغل DVD على شاشة التليفزيون.

ملاحظة

- قد يحدث تشويش إذا كان كابل الصوت شديد القرب من كابل التيار الكهربي.
- إذا أردت التوصيل بمضخم صوت ، فيُر جى إلر جوع إلى صفحة توصيل مضخم الصوت.
- يختلف عند أطراف التوصيل وصيل وموضعها حسب جهاز التلفاز. يرجى الرجوع إلى دليل المستخدم الخاص بالتلفاز.
- في حالة وجود طرف توصيل دخل صوت واحد بجهاز التلفاز، قم بتوصيله بطرف توصيل [AUDIO OUT] [الأيسر] (الأبيض) الموجود بمشغل أقراص DVD.
- في حالة الضغط علىزر .VIDEO SEL عندما يكون مشغل DVD في وضع التوقف أو في حالة عدم إدخال أي قرص ، يتغير الوضع خرج الفيديو بالتسلسلالتالي : (I-SCAN ← P-SCAN).

B. التوصيل بجهاز تلفاز (تداخل/متقدم)

١. باستخدام كابلات فيديو المكون ، قم بتوصيل طرف توصيل **COMPONENT VIDEO OUT** الموجود بالجز ء الخلفي لمشغل أقراص DVD بطرف توصيل **COMPONENT IN** بجهاز التلفاز.

٢. باستخدام كابلات الصوت ، قم بتوصيل طر في التوصيل **AUDIO OUT (الأبيض والأحمر)** بالجز ء الخلفي من مشغل أوأقراص الخاص أقراص DVD بطرفي توصيل **AUDIO IN (الأبيض والأحمر)** بجهاز التلفاز. قم بتشغيل مشغل أقراص DVD و التلفاز.

٣. اضبط خرج الفيديو على **P-SCAN/I-SCAN** في قائمة Display Setup يمكناستخدامالزر **.VIDEO SEL** في تغيير وضع خرج الفيديو.

ملاحظة

- ما هو "الاستعراض المتقدم" .
يتميز الاستعراض المتقدم بأنه يتضمن خطوط استعراض ضعف خطوط الاستعراضالخاصة بطريقة خرج التداخل. يمكن أن تمنحك طريقة الاستعراض المتقدم جودة صورة أوضح وأفضل.

C. التوصيل بنظم صوت (مضخم صوت ثنائي القنوات/مضخم القنوات Dolby Digital أو MPEG2)

١. باستخدام كابلات الصوت ، قم بتوصيل طر في التوصيل **AUDIO OUT (الأبيض والأحمر)** بالجزء الخلفي من مشغل أوأقراص الخاص أقراص DVD بطرفي توصيل **AUDIO IN (الأبيض والأحمر)** بمضخم الصوت. قم بتشغيل مشغل أقراص DVD و التلفاز.
إذا كنت تستخدم كابلاًذا محورين ، فقم بتوصيل طرف توصيل **DIGITAL AUDIO OUT (COAXIAL)** الموجود بالجزء الخافي لمشغل أقراص DVD بطرف توصيل **DIGITAL AUDIO IN (COAXIAL)** لمضخم الصوت.

٢. باستخدام كابل (كابلات) إشارات الفيديو، قم بتوصيل أطراف التوصيل **VIDEO** أو **COMPONENT OUT** بالجز ء الخلفي من لمشغل أقراص DVD بطرف توصيل **VIDEO** أو **COMPONENT IN** بجهاز التلفاز.

٣. قم بتشغيل مشغل أقراص DVD و التلفاز ومضخم الصوت.

٤. اضغط على زرتحديد الدخل الدخاص بمضخم الصوت لتحديد **الدخل الخارجي** لسما ع الصوت من مشغل DVD.

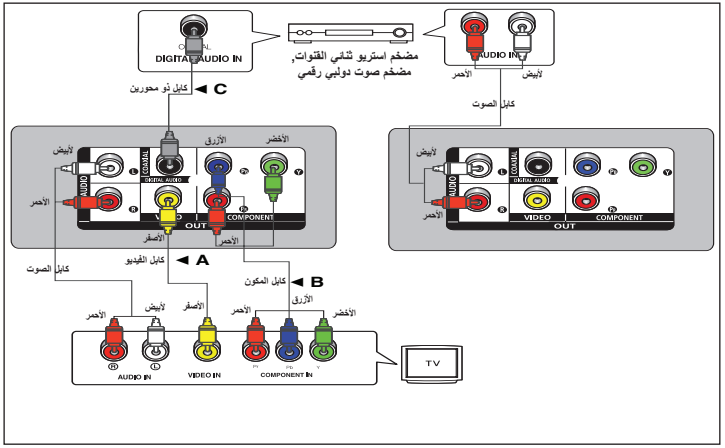

الوظائف الأساسية

تشغيل القرص

قبل التشغيل

- بتشغيل جهاز التلفاز و اضبطه على دخل الفيديو الصحيح بالضغطعلى الزر TV/VIDEO بو حدة التحكم عن بُعد الخاصة بالتلفاز.
- في حالة تو صيل نظام ضروت خارجي، قم بتشغيل نظام الصوت و اضبطه علىدخل الصوت الصحيح.

بعد تو صيل المشغل، تظهر هذه الشاشة في المرة الأو لى التي تضغط فيها على الزر **POWER** الحاص بمشغل أقر اص DVD. إذا أردت اختيار علىزر ▲/▼، ثم اضغط على الزر **ENTER**. (تظهر هذه الشا شة فقط عند إحدى اللغات ،فاضغط توصيل المشغلللمر ة الأولى.) إذا لم يتم ضبط شاشة بدء التشغيل، فقد تتغير الإعدادات حينما تقو م بالتشغيل إذا لم يتم ضبط شاشة بدء السبب، تأكد من اختيار الغة المر اد استخد امها بمجرد اختيارإحدى لغات القائمة، يمكنكتغيير هابالضغطعلىالزر ►|| باللو حة الأمامية للوحدة لمدة تزيد عن ه ثوانمعو جود القرص في الوحدة. ثم، يظهرإطار **SELECT MENU LANGUAGE** مرة أخرى حيث يمكنك إعادة تعين اللغة المفضلة إليك.

استحدام وظيفتي البحت والتخطي

أثناءالتشغيل،عكنك البحث بسر عة خلا ل فصل أو ما د ة مسجلة و ا ستخر ا م و ظيفة ا لتخطي للا بتقا ل إ لى ا لتحد يد التا لي

ا لبحث جلالأو مادة مسجلة

ا لبحث جلالأو مادة مسجلة SEARCH (►► أو ◄◄) بوحرةالتحكمعن بعد

DVD	2X, 4X, 8X, 16X, 32X
CD	2X, 4X, 8X, 16X, 32X
VCD	4X, 8X

ملاحظة

- قد تختلف السرعةاكيبية فيهذهالو ظيفةعن سرعة التشغيل الفعلية.
- لايصدرأي صوتأثناءوضعالبحث.(باستثناء الأقر الغعلية.

تخطيالوادالسجلة

أثناءد تشغيل،اضغطعلى لزر SKIP (►►| أو |◄◄)

- عند تشغيل قر صن DVD ، إذاقمت نا لضغط على لزر SKIP (►►|) فسينتقلإلىالفصلإلىالفصل لتا لي.في حالة نالضغطعلى لزر SKIP (|◄◄) ينتقل إلى الفصل.تؤدي ضغطة أخر ىعليه إلىانتقا لهإلى بداية فصل سا بق.
- عند تشغيل قرص VCD ط،إذا ضغطت على لزر SKIP (►►|) ،فسينتقل إلى الدا دة السجلة الية.قيحالةالضغطعلى لزر SKIP (|◄◄) ،ينتقلإلىبداية الدادةالسجلة.تؤدي ضغطةأخرىعليهإلىانتقا له إلى بداية ماد ة مسجلة سابقة.
- إذاحتاوزت مدةالدادةالدادةدقيقةعند تشغيلقرص VCD وقمت نالضغطعلىالزر (►►|) ، فسينتقلإلىالأمام.عقداره دقائق. إذاضغطت علىالزر (|◄◄) فسينتقل إل إلى الخلف.عقداردقائق.

استخدام وظيفة العرض

عند تشغيل قرص DVD/VCD/MPEG4

١. أثناء لتغيل، ضغط على الزر **TOOLS** بوحدة التحكم عن بعد.
٢. اضغطعلىزر ▲/▼ لتحد يدالعنصرالطلوب.
٣. اضغط علزر ►/◄ لإحرالإعد
٤. لإخفاء الشاشة، اضغط على الز **TOOLS** مرة أخرى.

تظهر الوظائف عند استخدام وظيفة العرض (Display) في الجدول أدناه

	للوصول إلىالعنوان المطلوب في حالة وجود أكثر من عنوان. على القرص. على سبيل المثال، فيحالة وجود أكثرمن فيلم على قرص DVD، يتم التعرف على كل فيلم.
	يتم تسجيل معظم أقراص DVD في فصول حتى يمكنك العثور على مقطع محدد (تشبه المواد المسجلة على قرص صوت مضغوط).
	لإتاحة تشغيل الفيلم من الوقت المطلوب. يجب إدخال وقت البدء كمرجع. لاتعمل وظيفة البحث عن الوقت مع بعض الأقراص.
	للإشارة إلى لغة المادة الصوتية المسجلة للفيلم. في المثال، يتم تشغيل المادة الصوتية المسجلة فى صوت English. عيمكن أن يحتوي اقرص DVD على ما يصل إلى تمان مواد صوتية مسجلة مختلفة.
	للإشارة إلى لغات الترجمة المصاحبة المتو فرة على القرص .ستتمكن من اختيار لغات الترجمة المصاحبة أو إيقاف تشغيلها من الشاشة، إذا كنت تفضل ذلك.يمكن أن يحتوي قرص DVD على ما يصل إلى ٣٢ ترجمة مصا حبة مختلفة.
	تستخدمالوظيفةEZ View(عرضEZ)لتغييرنسبةالعر ضإلىالارتفاعللقرصDVD
	اضغط على الزر ENTER لتنشيط و ظيفة Zoom (التكبير).
	للوصولإلىوظيفة Angle المطلوبة. بعضأقراصDVD يلوظائفـزاويةأكثربكثيرمنأي ةصورة.

استحدام قائمتي العناوين والأقراص

١. أثناء تشغيل قرص DVD، اضغط على لزر **TITLE MENU/DISC MENU** بوحدة التحكم عن بُعد.

ملاحظة

- قد لا تعمل وظيفة Title Menu/Disc menu وفقًا للقرص.
- كذلك، يمكنك استخدام قائمة الأقراص، باستخدم الزر MENU DISC بوحدة التحكم عن بُعد.
- سيتم عرض وظيفة Title Menu فقط في حالة وخود عنوانين على الأقل على القرص.

تكرار التشغيل

تستيع تكرار تشغيل المادة المسجلة أو الفصل أوالعنو ان الحالي أو قسم مختار (A-B)أو القرص بأكمله.

عند تشغيل قرص DVD/VCD

١. اضغط على الزر **REPEAT** بوحدة التحكم عن بُعد. فتظهر شاشة التكلرار
٢. اضبط على الزرين **REPEAT** أو ▲/▼ لتغيير وضع التشغيل. يكرر قرص DVD التشغيل حسب الفصل أو العنوان.
- إيقاف التشغيل
- Title (العنوان) : لتكرار العنوان الحاري تشغيلة.
- Chapter (باب) : لتكرار الفصل الحاري تشغيلة.
- REPEAT A-B (تكرار A-B)

استخدام وظيفة Repeat A-B (DVD-E360K)

١. أثناء لتغيل، ضغط على الزر **REPEAT** بوحدة التحكم عن بعد.
٢. اسخدم الزرين ▲/▼ لتحديد **REPEAT A-B** ، ثم اضغط على الزر **ENTER**
٣. اضغط على لزر **ENTER** عند الموضع المطلوب بدء تكرار التشغيل عنده (A).
٤. اضغط على لزر **ENTER** عند الموضع المطلوب إيقاف تكرار التشغيل عنده (B).

استخدام وظيفة Repeat A-B (DVD-E360, E350)

١. أثناء لتغيل، ضغط على الزر **REPEAT A-B** بوحدة التحكم عن بعد.
٢. اضغط على لزر **REPEAT A-B** عند الموضع المطلوب بدء تكرار التشغيل عنده (A).
٣. اضغط على لزر **REPEAT A-B** عند الموضع المطلوب إيقاف تكرار التشغيل عنده (B).
٣. للرجوع إلى التشعيل العادي، اضغط على الزر **REPEAT A-B** الشاشة ر: سالة تكرار إيقاف تشغيل (Repeat: Off).

ملاحظة

- لا تسمح وظيفة AB REPEAT لك بضبط النقطة (B) حتى انقضاء ٥ ثوانٍ على الأقل من التشغيل بعد ضبط النقطة (A).
- حسب القرص، ربما لا تعمل وظيفة Repeat.

التشغيل البطيء

تتيح لك هزه الميزة التكرار البطيئ للمشاهد المحتوية على لقطات ر ياضية والحركة والأدواتالمو سيقية التي تعمل وغيرها بحيث يمكنك دراستهاعن قرب.

عند تشغيل قرص DVD

١. أثناء التشغيل ،اضغط على الزر **PLAY (▶II)** .
٢. .اضغط على الزر **SEARCH (◀◀/▶▶)** لاختيار سرعة التشغيل بين ٢/١ و٤/١ و٨/١ و١٦/١ للسرعات العادية أثناء الوضع PAUSE.
إذا أردت التشغيل العادي ، اضغط على زر PLAY (تشغيل).

الوظائف المتقدمة

ضبط نسبة الارتفاع إلى العرض (EZ View)

للتشغيل باستخدام نسبة الارتفاع إلى العرض (DVD)

١. اضغط على الزر **TOOLS** بوحدة التحكم عن بُعد. فتظهر شاشة التكلرار
٢. اضبط على الزرين ▲/▼ لتحديد . في كل مرة تضغط فيها زر هت ◀/▶ يتغير حجم الشاشة.
للتعرف على أشكال حجم الشاشة وقوائم التسلسلات التي تتغير بها الشاشة، انظر العمود أدناه
٣. اضغط زر خروج **RETURN** للخروج من عرض هت (EZ VIEW)

إذا كنت تستخدم تلفاز بنسبة الارتفاع إلى العرض ٩:١٦

للأقراص التي تعمل بنسبة الارتفاع إلى العرض ٩:١٦
- WIDE SCREEN
- SCREEN FIT
- ZOOM FIT

للأقراص التي تعمل بنسبة الارتفاع إلى العرض ٣:٤
- Normal Wide
- SCREEN FIT
- ZOOM FIT
- Vertical Fit

إذا كنت تستخدم جهاز تيفزيون بنسبة الارتفاع إلى العرض ٣:٤

للأقراص ذات نسبة الارتفاع إلى العرض ٩:١٦
- 4:3 Letter Box
- 4:3 Pan Scan
- SCREEN FIT
- ZOOM FIT

للأقراص التي تعمل نسبة الارتفاع إلى العرض ٣:٤
- Normal Screen
- SCREEN FIT
- ZOOM FIT

ملاحظة

قد تؤدي هذه الوظيفة إلى نتائج مختلفة حسب نوع القرص.

تحديد لغة الصوت

يمكنك تحديد لغة الصوت المطاوبة على نحو سريع وسهل باستخدام الزر AUDIO.

استخدام الزر (◄) AUDIO (DVD/VCD/MPEG4)

١. اضغط على الزر **(◄) AUDIO**. يتغير الصوت عند الضغط على الزر بشكل متكرر. .يمكنك تغيير لغة الصوت بالضغط على زر صوتي أو ▼/▲.

- يتم عرض لغات الصوت باستخدام الاختصارات.

٢. لإزالة الرمز **AUDIO** ، اضغط على الز **RETURN**.

ملاحظة

- تعتمد هذه الوظيفة على لغات الصوت التي تم تشفيرها على القرص وقد لا تعمل.
- يمكن أن يحتوى قر ص DVD على ما يصل إلى٨ لغات صوت.

تحديد لغة الترجمة المصاحبة

يمكنك تحديد الترجمة المصاحبة المطاوبة على نحو سريع باستخدام الزر SUBTITLE.

استخدام الزر (▲) SUBTITLE (DVD/MPEG4)

١. اضغط على الزر **(▲) SUBTITLE**. يتم عرض لغات الترجمة المصاحبة المتو افرة باستخدام الاختصارات.

٢. اضغط زر **(▲) SUBTITLE** أو ▼/▲ لتغيير اللغة. في كل مرة تضغط فيها على زر الترجمة **(▲) SUBTITLE** أو ▼/▲ تتغير اللغة.

٣. لإزالة الرمز **SUBTITLE** ، اضغط على الز **RETURN**.

ملاحظة

- يتم تغيير الترجمة المصاحبة عند الضغط
- قد تحتاج إلى تغيير الترجمة المصاحبة المطلوبة في قائمة Disc Menu حسب نوع القرص. اضغط على الزر DISC MENU.
- تعتمد هذه الوظيفة على لغات الترجمة المصاحبة التي تم تشفيرها على القرص وقد لا تعمل وقد لا تعمل على كافة أقراص DVD.
- مكن أن يحتو ى قرص DVD على ما يصل إلى ٣٢ لغة للترجمة المصاحبة.

تغيير زاوية الكاميرا

إذا كان قرص DVD يحتوي على زوايا متعددة لمشهد معين، يمكنك استخدام وظيفة ANGLE.

استخدام وظيفة ANGLE (أقراص DVD)

إذا كان القرص يحتوي على زوايا متعددة، فستظهر الوظيفة ANGLE على الشاشة.

١. أثناء و ضع التشغيل أو الإيقاف المؤقت، اضغط على الزر **TOOLS** بوحدة التحكم عن بُعد.

٢. اضبط على الزرين ▼/▲ لتحديد . اضبط على الزرين ◄/► أو يمكن استخدام أزرار الأرقام على وحدة التحكم عن بُعد لتحديد الزاوية المطلو بة.

استخدام وظيفة العلامات

تتيح لك هذه الميزة وضع علامة على أجزاء قرص DVD أوقرص VCD (وضع Menu Off) بحيث يمكنك الوصول إليها بسرعة في وقت لاحق.

استخدام وظيفة (أقراص DVD/VCD)

١. أثناء و ضع التشغيل أو الإيقاف المؤقت، اضغط على الزر **MARKER** بوحدة التحكم عن بُعد.

٢. عند الوصول إلى مشهد المطلوب تمييزه،اضغط على الزرين ◄/► الزر ▼/▲ ثم اضغط على **MARKER**. يمكن تمييز حتى ١٢ مشاهد فى المرة الواحدة.

ملاحظة

- قدلا تعمل وظيفة Bookmark حسب نوع القرص

استدعاء مشهد مميز بعلامة

١. أثناء و ضع التشغيل أو الإيقاف المؤقت، اضغط على الزر**MARKER** بوحدة التحكم عن بُعد.

٢. اضغط على الزرين ◄/► أو الزر ▼/▲ لتحديد مشهد مميز بعلامة.

٣. اضغط على الزر **(►II) PLAY** لتخطي الشهد المُميز بعلامة

مسح علامة

١. أثناء و ضع التشغيل أو الإيقاف المؤقت، اضغط على الزر**MARKER** بوحدة التحكم عن بُعد.

٢. اضغط على الزرين ◄/► أو الزر ▼/▲ لتحديد رقم العلامة الطلوب حذفها.

٣. اضغط على الز **ENTER** لحذف رقم العلامة.

استخدام وظيفة التكبير/التصغير

استخدام وظيفة Zoom (أقراص) (DVD-E350)

١. أثناء و ضع التشغيل أو الإيقاف المؤقت، اضغط على الزر **ZOOM** بوحدة التحكم عن بُعد.

استخدام وظيفة Zoom (أقراص) (DVD-E360K, E360)

١. أثناء و ضع التشغيل أو الإيقاف المؤقت، اضغط على الزر **TOOLS** بوحدة التحكم عن بُعد.

٢. اضبط على الزرين ▼/▲ لتحديد ، ثم اضغط على الزر **ENTER**.لتكبير بنسبة .X٤,X٣,X٢,X١ بالتر تيب.

قائمة مقاطع ملفات MP3/WMA/JPEG/MPEG4/قرص المضغوط

تحتوي أقراص الصوت المضغوطة أو الأ قراص التي تتضمن ملفات MP3/WMA/JPEG/MPEG4 على أغانٍ خاصة و/أو الصور التي يمكن تنظيمها في مجلدات على النحو الموضح أدناه. وهي تتشابه مع طريقة استخدام الكمبيوتر لوضع الملفات في مجلدات مختلفة.

لدخول إلى هذه المجلدات والملفات التي تشمل عليها، اتبع الخطوات التالية :

١. افتح درج الأقراص. ضع القرص في الدرج.

٢. أغلق الدرج. تغلق العلبة وتظهر نافذة قائمة المجلد الرئيسي (Parent Folder Menu) (الصورة التي تظهر أعلى الصفحة). تحتوي المجلدات الرئيسية على جميع المجلدات الشبيهة (Peer) التي تضم نفس نوع المحتوى الموسيقى، ملفات الفيديو، الصور، الخ.

٣. اضغط أزرار ◄/► لاختيار المجلد الرئيسي ثم اضغط زر إدخال (ENTER)
تظهر شاشة المجلدات الشبيهة. تضم المجلدات الشبيهة جميع المجلدات التي تحتوي على نفس نوع المحتوى (ملفات فيديو، موسيقى، صور، الخ) المو جود بالمجلدات الرئيسية.

تحديد انجلد

يمكن تحديد المجلد في كل من الوضع Stop أو Play.

- لتحديد المجلد الرئيسي

اضغط على الزر **RETURN** للانتقال إلى المجلد الرئيسي، أو اضغط على الزرين ▼/▲ لتحديد ".." ثم اضغط على **ENTER** كي تنتقل إلى المجلد الر ئيسي.

- لتحديد المجلد النظير

اضغط على الزرين ▼/▲ لتحديد المجلد المطلوب ثم اضغط على الزر **ENTER**.

- لتحديد المجلد الفرعي

اضغط على الزرين ▼/▲ لتحديد المجلد المطلوب ثم اضغط على **ENTER**.

تشغيل صوت MP3/WMA/القرص المضغوط

١. افتح درج الأقراص. ضع القر ص في الدرج. أغلق الدرج.
٢. اضغطعلى الزرين ◄/► لتحديد قائمة الموسيقى ثم اضغط على الزر **ENTER**. اضغطعلى الزرين ▼/▲ أو الزرين لتحديد ملف أغنية ثم اضغط على **ENTER (إدخال)** لبدء تشغيل ملف الأغنية.

التكرار والتشغيل العشوائي

اضغط على الزر **REPEAT** لتغيير وضع التشغيل. توجد أربعة أوضا ع تشغيل **Off** و **Track** و **Folder** و **Random**.
- Off (إيقاف) (⇄): تشغيل عادي
- Track (مقطع موسيقى) (□): لتكرار ملف الأغنية الحالي.
- Folder (مجلد) (▣): لتكرار ملفات الأغاني المتشابهة في الامتداد بترتيب عشوائي.
- Random (عشوائي) (⤮): سيتم تشغيل ملفات الأغاني المتطابقة في الامتد اد بترتيب عشوائي.

لا ستئناف التشغيل العادي ، اضغط على الزر **REPEAT** حتى تكرار : إيقاف (Repeat: Off).

ملف MP3/WMA بقرص CD-R

عند تسجيل ملفات MP3 أو WMA على قرص CDR يرجى الرجوع إلى ما يلي.

- **يجب أن تكون ملفات MP3 أو WMA بتنسيق 9660 ISO أو JOLIET.**

يتوافق تنسيق 9660 ISO و Joliet لملفات MP3 أو WMA مع نظام اتشغيل Microsoft DOS و Microsoft Windows ونظام التشغيل Apple Mac وهو التنسيق الأكثر استخداماً .

- **عند تسمية ملفات MP3 أو WMA، يجب ةلايتجاوز الاسم ٨ حروف ويجب إدخال ".mp3 و .wma" كامتداد الملف.**

التنسيق العام للاسم : Title.mp3 أو Title.wma. عند تكوين العنوان، تأكد من استخدام ٨ حروف أو أقل وعدم وجود مسافات في الاسم وتجنب استخدام الحروف الخاصة بما في ذلك : (.\/،=:+).

- **استخدم معدل نقل فك ضغط لا يقل عن ١٢٨ كيلو بايت في الثانية عند تسجيل ملفات MP3**

تعتمد جودة صوت ملفات MP3 بشكل أساسي على معدل الضغط/فك الضغط المحدد. يتطلب الحصول على صوت قرص الصوت المضغوط توفر معدل عينة تناظري/رقمي، بما يعني التحويل إلى تنسيق MP3، بما لا يقل عن ١٢٨ كيلو بايت في الثانية وحتى ١٦٠ كيلو بايت في الثانية. بينما لا يؤدي اختيار المعدلات الأعلى، مثل ١٩٢ كيلو بايت في الثانية أو مايزيد، الى الحصول على جودة صوت أفضل إلا في الحالات النادرة. وبالعكس، لن يتم تشغيل الملفات ذات معدل فك الضغط الذي يقل عن ١٢٨ كيلو بايت في الثانية بشكل صحيح.

- **استخم معدل نقل فك ضغط لا يقل عن ٦٤ كيلوبايت في الثانية عند تسجيل ملفات WMA**

تعتمد جودة صوت ملفات WMA بشكل أساسي على معدل الضغط/فك الضغط المحد. يتطلب الحصول على صوت قرص الصوت المضغوط توفر معدل عينة تناظري/رقمي، بما يعني التحويل إلى تسيق WMA، بما لا يقل عن ٦٤ كيلو بايت فيالثانية وحتى ١٩٢ كيلو بايت في الثانية. وعلى العكس، لن يتم تشغيل لملفات WMA أكبر من ٣٠ كلو هرتز. ١٩٢ كيلو بايت في الثانية بشكل صحيح. معدل العينات الذي يمكن دعمه

- **لا تسجيل ملفات MP3 المحمية بموجب حقوق الطبع والنشر.**

تم تشفير بعض الملفات "المحمية" وحمايتها بالرموز لمنع النسخ غير القانوني. تتمي هذه الملفات إلى الأنواع الآتية : Windows Media™ (علامة تجارية مسجلة لشركة Microsoft Inc) و SDMI™ (علامة تجارية مسجلة للشركة SDMI Foundation). لا يمكنك نسخ مثل هذه الملفات.

- **هام :**

لا يمكن اعتبار التوصيات المذكورة أعلاه ضمانًا بأن مشغل أقراص DVD سيقوم بتشغيل تسجيلات MP3 أو تأكيدًا على جودة الصوت. يجب ملاحظة أن بعض تقنيات وأساليب تسجيل ملفات MP3 على أقراص CD-Rs تمنع التشغيل الأمثل لهذه الملفات باستخدام مشغل أقراص DVD (كانخفاض جودة الصوت وعجز المشغل في بعض الحالات عن قراءة الملفات).
- تستطيع هذه الوحدة تشغيل حتى ٥٠٠ ملف و ٥٠٠ مجلد كحد أقصى في القرص الواحد.

تشغيل MPEG4

وظيفة تشغيل MPEG4

يتم استخد ام ملفات AVI بغرض احتواء بيانات فيديو وصوت. فلا يمكن تشغيل سوى الملفات بتنسيق AVI فقط ذات الامتداد ".avi"..

١. افتح درج الأقراص. ضع القرص في الد ج. أغلق الدرج.
٢. اضغطعلى الزرين ◄/► لتحديد قائمة ملفات الفيديو ، ثم اضغط على الزر **ENTER**. اضغطعلى الزرين ▼/▲ لتحديد ملف avi (DivX) ، ثم اضغط على الزر **ENTER**.

تكرار تشغيل و استخدام وظيفة REPEAT A-B

١. اضغط على الزر REPEAT لتغيير وضع التشغيل. هناك ثلاثة أوضاع، مثل Off و Title و Folder.
- **إيقاف التشغيل**
- **TItle (العنوان)** : لتكرار العنوان الحاري تشغيلة.
- **Folder (مجلد)** : لتكرارملفات AVI ذات الامتداد المتماثل في المجلد الحالي.
- **REPEAT A-B (تكرار A-B)**

استخدام وظيفة A-B Repeat (DVD-E360K)

١. أثناء لتغيل، ضغط على الزر **REPEAT** بوحدة التحكم عن بعد.
٢. اسخدم الزرين ▼/▲ لتحديد **REPEAT A-B** ، ثم اضغط على الزر **ENTER**
٣. اضغط على لزر **ENTER** عند الموضع المطلوب بدء تكرار التشغيل عنده (A).
٤. اضغط على لزر **ENTER** عند الموضع المطلوب إيقاف تكرار التشغيل عنده (B).

استخدام وظيفة A-B Repeat (DVD-E360,E350)

١. أثناء لتغيل، ضغط على الزر **REPEAT A-B** بوحدة التحكم عن بعد.
٢. اضغط على لزر **REPEAT A-B** عند الموضع المطلوب بدء تكرار التشغيل عنده (A).
٣. اضغط على لزر **REPEAT A-B** عند الموضع المطلوب إيقاف تكرار التشغيل عنده (B).

- للرجوع إلى التشعيل العادي، اضغط على الزر **REPEAT A-B** الشاشة ر: سالة تكرار إيقاف تشغيل (Repeat: Off).

وصفوظيفة MPEG4

الوظيفة	الوصف
Skip (►►| أو |◄◄)	أثناء التشغيل, اضغط على الزر |◄◄أو►► تنتقل إلى المسار التالي أو السابق.
Search (►► أو ◄◄)	أثناء التشغيل، اضغط على الزر SEARCH (◄◄ أو►►) واضغط مرةً أخرى للبحث بسرعة أكبر. يتيح البحث بسرعة أكبر في ملف AVI. (٢X, ٤X, ٨X, ١٦X, ٣٢X).
تشغيل بلاحركة لبطيئة	أثناء التشغيل ،اضغط على الزر **PLAY (►II)** ،ثم اضغط على الزر **SEARCH** (►►) يتيح البحث بسرعة أقل في ملف AVI. (١/٢ ,١/٤ ,١/٨ ,١/١٦)
ZOOM	X٤/X٣/X٢/X١/Normal بالتر تيب

- قد لا تعمل هذه الوظائف وذلك حسب ملف MPEG4.

ملف AVI على قرص CD-R

بإمكان هذا الجهاز تشغيل تنسيقات ضغط الفيديو التلاية داخل تنسيق الماف AVI :
- محتويات DivX 3.11
- محتويات DivX 4 (حسب MPEG-4 Simple Profile)
- محتويات DivX 5 (الوضع البسيط الخاص بـ MPEG-4 علاوة على الميزات الإضافية مثل الإطارات ثنائية الاتجاهات. كما يتم دعم Qpel و GMC أيضًا.)

أقراص DVD+R & DVD-RW

التنسيق الذي يدعم DivX:
- تنسيق DivX الأساسي DivX3.11/4.12/5.x
- DivX Pro
- تنسيق الملف : *.divx, *.div, *.avi.

يدعم هذا الجهاز كافة درجات الدقة حتى أقصى دقة معروضة أدناه.

يدعم هذا الجهاز كافة درجات الدقة حتى أقصى دقة معروضة أدناه.

DivX5
٧٢٠ x ٤٨٠ بمعدل ٣٠ إطاراً في الثانية
٧٢٠ x ٥٧٦ بمعدل ٣٥ إطاراً في الثانية
: أقصى معدل نقل بيانات : ٤ ميجابايت في الثانية

تظهررسائل تحذير محتملة خلال محاولة تشغيل ملف DivX :

١. لا يوجد تصريح
- الملف المنشأ برمز تسجيل خطأ.

٢. بر نامج فك تشفير غير مدعوم
- ملف بإصدرات وأنواع فك تشفير معينة (مثل: MP4 و AFS و برامج فك تشفير ملكية أخرى) لا يدعمها هذا المشغل.

٣. دقة غير مدعومة
- الملف الذي يحتوي على درجات دقة أعلى من مواصفات المشغل غير مدعوم.

ملاحظة

- الدقة التي يمكن دعمها بواسطة الطراز DVD-E360K,E360,E350 تصل إلى 720 x 480 على 30 إطا رًا، 720 x 576 على 25 إطاراً.
- قد يتعذر تشغيل بعض ملفات MPEG-4 التي تم إنشاؤها على كمبيو ترشخصي.وهذا يفسرسبب عدم نوع برنامج فك التشفير والإصدار والدقة الأعلى المتجاوزة للمو اصفات.
- يدعم هذا للجهاز أقراص CD-R/RW المكتو بة بتنسيق MPEG4 والمتو افقة مع التنسيق "ISO9660".

تشغيل ملفات الوسائط باستخدام ميزة مضيف USB (DVD-E360K,E360)

يمكنك الاستمتاع بملفات الوسائط مثل الصور و الأفلام و النغمات المحفوظة بمشغل MP3 أو ذاكرة USB أو الكامير الرقمية بصوت مرتفع عن طريق توصيل وحدة التخزين بمنفذ USB الموجود بمثل أقراص DVD.

استخدام ميزةUSB HOST (مضيف USB)

١. قم بتوصيل وحدة USB بمنفذ USB الموجود بالجزء الأمامي من الوحدة.
٢. تظهر قائمة يو إس بي (USB)، اضغط على الزر ►/◄ لتحديد قائمة، ثم اضغط على ENTER (موافق).
٣. فاضغط على الزرين ▼/▲ لتحديد ملف في USB. اضغط على ENTER (موافق) لفتح الملف.

التديل بين DVD و USB

إذا كان لديك قرص في المشغل وكنت تشاهد ملفات أو تستمع إليها على جهاز **USB**، أوكانت قائمة **USB** على الشاشة ، فيمكنك التبديل من جهاز **USB** إلى القرمن خلال الضغط على زر **USB** في وحدة التحكم عن بعد.
كما يمكنك التبديل من القرص لجهاز USB من خلال الضغط على زرUSB في وحدة التحكم عن بعد. ستظهر شاشة "جارتحميل USB.." على الشاشة، ثم تظهر قائمة USB بعد ذلك.

ملاحظة

• اعتمادا على حجم الملف ومدته، فإن التحميل على (USB) قد يستغرق وقتًا أطبر من استخدام الوسائط الموجودة على سي دي أو دي في دي .

إزالة USB على نحو آمن

١. .اضغط على زر USB للعودة إلى وضع القرص أو الشاشة الرئيسية
٢. اضغط على الزر(■) STOP (إيقاف).
٣. أزل كابل USB.

التخطي للأمام/للخلف

أثناء التشغيل، اضغط على الزر (|◄◄/►►|).

• في حالة وجود أكثر من ملف، يتم تحديد الملف التالي عند الضغط على **الزر (|►►)**.
• في حالة وجود أكثر منملف، يتم تحديد الملف السابق عند الضغط على الزر (|◄◄).

التشغيل السريع

لتشغيل القرص بسرعة أعلى، اضغط على الزر أثناء التشغيل **(◄◄/►►)**.

• في كل مرة يتم فيها الضغط أي من الزرين، تتغير سرعة التشغيل كما : ٢X ← ٤X ← ٨X ← ١٦X ← ٣٢X.

الأجهزة المتوافقة

١. وحدات USB التي تدعم USB Mass Storage v1.0. (وحدات USB التي تعمل كقرص قابل للإزالة في نظام التشغيل Windows (الإصدار 2000 أو الإصدار الأحدث) بدون تثبيت برنامج تشغيل (إضافي).
٢. مشغل MP3 : مشغل MP3 من نوع الفلاش ومحرك الأقراص الصلبة.
٣. الكاميرا الرقمية : الكاميرات التي تدعم وحدات USB Mass Storagev1.0.
• الكاميرات التي تعمل أقرص قابل للإزالة في نظام التشغيل Windows (الإصدار 2000 أو الإصدار الأحدث) بدون تثبيت برنامج تشغيل إضافي.
٤. محرك أقراص فلاش USB : الأجهزة التي تدعم USB2.0 أو USB1.1.
• قد تجد اختلافًا في جودة التشغيل عند توصيل وحدة USB1.1.
٥. قارئ بطاقة USB : قارئ بطاقة USB ذو فتحة واحدة وقارئ USB.
• وفقًا لجهة التصنيع، قد لا يتم تدعيم قارئ بطاقة USB.
• قد تواجهك مشكلات، في حالة تركيب وحدات ذاكرة متعددة في قارئ بطاقات متعددة.
٦. في حالة استخدام كابل توصيل USB، قد لا يتم التعرف على جهاز USB.

ملاحظة

- CBI غير مدعوم (تحكم/تضخيم/قطع)
- وأيضًا الكاميرات الرقمية التي تستخدم بروتوآول PTP التي تتطلب تثبيت برنامج إضافي عند توصيلها بالكمبيوتر غير مدعومة.
- ولا يتم دعم الجهاز الذي يستخدم نظام ملف NTFS. (يتم فقط دعم نظام ملف FAT 32/16 (جدول توزيع الملف 32/16).
- وقد لا يتم تشغيل بعض مشغلات MP3 عند توصيلها بهذا المنتج وذا يعتمد على حجم قطاع نظام الملفات.
- تكون وظيفة USB HOST غير مدعومة في حالة توصيل المنتج الذي يقوم بنقل ملفات الوسائط باستخدام البرنامج المخصص من المُصنع.
- لا يمكن التشغيل مع أجهزة MTP (بروتوكول نقل الوسائط) التي تُمكن Janus.
- وظيفة مضيف USB لهذا المنتج لا تدعم أاقة أجهزة USB.
- مضيف يو إس بي هذا لا يدعم مشغلات القرص الصلب (HDD)

النسخ من القرص المُدمَج (DVD-E360K,E360)

تتيح لك هذه الميزة نسخ ملفات الصوت من القرص إلى جهاز USB بتنسيق MP3

افتح درج القرص. ضع القرص المدمج الصوتي (CD DA) على الدرج ثم قم بإغلاقه. قم بتوصيل جهاز USB إلى مضيف USB في مقدمة المشغل. اضغط على الزر **ENTER** لتحديد القرص. اضغط على زر USB.

١. عندما تكون الو حدة في و ضع الإيقاف، اضغط على الزر **TOOLS** لعرض شاشة Ripping (انسخ من الأقر اص).
٢. انقر على الأزرار ▼/▲، ثم ضغط على**الزر (بدء) ENTER** لتحديد جميع الملفات للنسخ.
- لإلغاء تحديد نسخ جميع الملفات، اضغط على الزر **ENTER** مرة أخرى (قائمة إلغاء التحديد).
٣. ضغط على الزر ◄ و ▼ لتحديد START (بدء) قائمة النسخ من الأقراص ، ثم اضغط على الزر **ENTER**.
تحتوي قائمة القص (Ripping) على الأز رار التالية
- **الوضع (سريعة/عادي)**
- **معدلات البت**، اضغط على الزر **ENTER** لتغيير 128 كيلو بت/الثانية إلى 192 كيلو بت/الثانية و 128 كيلو بت/الثانية..
- تحديد الجهاز، اضغط على الزر **ENTER** للتغير بين الأ جهز ة (بحد أقصى 4)
- تحديد إلغاء تحديد، اضغط على الزر **ENTER** للتغتغيير من تحديد الكل إلى تحديد بلا.
- بدء النسخ، اضغط على الزر **ENTER** لبد ء عملية النسخ.

ملاحظة

• لإلغاء النسخ فيد التنفيذ، اضغط زر إدخال (ENTER)
• للعودة إلىشاشة CDDA، اضغط على الزر TOOLS مر ة أخرى.
• عندما تتم معالجة النسخ من القرص المدمج سوف يصبح المشغل في حالة التشغيل تلقائيًا.

• الأقراص المدمجة الصوتية (CD DA) التي يمكن النسخ منها.
• لأن السر عة تعادل 2.6 ضعف من السر عة العادية. لا يستطيع المستخدم تشغيل CDDA من خلال عملية نسخ الأقر اص.
• لا يعمل زر يو إس بي (USB) عندما تكون في قائمة القص (Ripping).
• قد لا تعمل وظيفة اقتصاص السي دي (Ripping) مع بعض مشغلات ملفات MP3.

تشغيل القرص الذي يتضمن صور

١. حدد المجاد المطلو ب

٢. اضغط على الزرين ▼/▲ لتحديد ملف الصوسة في قائمة المقاطع ثم اضغط على الزر **ENTER**.

ملاحظة
- اضغط على الزسر STOP للعودة إلى قائمة المقاطع.
- عند تشغيل قرص Kodak Picture CD، تعرض الوحدةالصور مباشرةً وليس قائمة المقاطع.

(تدوير) Rotation

- اضغط على الزرين **TOOLS** لتحديد الوجه ، ثم اضغط على الزر **ENTER**.
- في كل مرة يتم النقر فيها على زر ►/◄ تدور الصورة 90 درجة في اتجاه عقار ب السا عة.
- في كل مر ة يتم الضغط على زر ▲ ، سو ف تنعكس الصورة رأسًاعلى عقب لعر ض صو ر ة معكو سة.
- في كل مر ة يتم الضغط على زر ▼ ، سو ف تنعكس الصورةإلى الجا نب الصحيح لعر ض صو ر ة معكو سة.

(تكبير) Zoom

- اضغط على الزرين **TOOLS** لتحديد تكبير ، ثم اضغط على الزر **ENTER**.
- في آل مرة يتم النقر فيها على زر ENTER يتم تكبير الصورة. وضع التكبير: X١-X٢-X٣-X٤-X١ .
- اضغط على الزرين ▼/▲/►/◄ لتحريك الصورة المكبرة بحيث يمكنك مشاهدة أجزاء مختلفة.

Slide Show

- عندما نقوم بالنقر علىزر (الدخول/التشغيل) في ملف Jpeg سوف تنتقل مباشر ة إلى و ضع الشاشة الكاملةويتم عر ض الشر ائح تلقائيًا.

ملاحظة
- حسب حجم اللف، قد يكون مقدار الفا صل بين كل صو رة مختلفًا عن هذا الذ ليل.
- إذا لم يتم الضغط على أي زر، فسيبدأ عر ض الشرائح تلقائيًا خلال ١٠ ثو انٍ بشكل افتر اضي.

قرص CD-R نو ملفات بامتداد JPEG

- يكن تشغيل الملفات ذات الامتداد ".jpg" و ".JPG" فقط.
- إذا كان القرص غير مغلق، فسيستغرق وقتًا أطول لبدء التشغيل وقد يتعذر تشغيل كافة الملفات المسجلة.
- يمكن تشغيل أقراص CD-R التي تشتمل على ملفات JPEG بتنسيق ISO 9660 أو Joliet فقط.
- لا يجوز أن يكون اسم ملف JPEG أطول من ٨ حروف ويجب ألايشتمل على مسافات فار غة أو حروف خاصة (. / = +).
- يمكن تشغيل قرص تمت كتابتهعلى جلسات متتابعة فقط. إذا احتوى قرص الجلسات المعددة فـلى مقطع فارغ، فيمكن تشغيل العرض حتى المقطع الفارغ فقط.
- يمكن تسجيل ٥٠٠ صورة كحد أقصى على قرص مضغوط واحد.
- يُنصح باستخدام أقراص Kodak Picture CD.
- عند تشغيل أقرص Kodak Picture CD ، يمكه تشغيل ملفات JPEG فقط في مجلد الصور.
- قرص Kodak Picture CD : يمكن تشغيل ملفات JPEG الموجودة في مجلد الصور بشكل تلقائي.
- قرص Konica Picture CD : إذا كنت تريد عرض الصورة، فحدد ملفات JPEG في قائمة المقاطع
- قرص Fuji Picture CD : إذا كنت تريد عرض الصورة، فحدد ملفات JPEG في قائمة المقاطع
- قرص QSS Picture CD : قد لا تستطيع الوحدة تشغيل قرص QSS Picture CD
- إذا كان عدد الملفات الموجودة في قرص واحد فقط يزيد عن ٥٠٠ ملف، فيمكن تشغيل ٥٠٠ ملف بتنسيق JPEG فقط.
- إذا كان عدد المجلدات الموجودة في قرص واحد فقط يزيد عن ٥٠٠ مجلد، فيمكن تشغيل ملفات JPEG فقط ٥٠٠ مجلد.

وظائف كاروكي (DVD-E360K)

وظائف كاروكي

يسلسل عمليات التشغيل

١. قم بتوصيل طرفي خرج الصوت المشترك بتلفزيون أو مكبر.

٢. قم بتوصيل قابس الميكروفو **Mic** (الميكروفون) ن بـوضبط نتيجة الكاريوكي على تشغيل. عند توصيل الميكروفون وضبط نتيجة الكاريو كي على تشغيل ، يمكنك استخدام وظائف الكاريوكي.

نتيجة الكاريوكي/ مستوى صوت الميكروفون/ التحكم في المفتاح (التحكم في النغمة)

١. قم بتشغيل قرص الكاريوكي الذي يضم الأغاني التي تريدها

- اضغطعلى الزرين **KARAOKE** (▼) لتحديد ملف **النتيجة مستوى الصوت** أو **مفتاح**.

٢. اضغط على الزرين ►/◄ لتحديد العنصر المطلوب.

نتيجة الكاريوكي (النتيجة)

ستظهر لنتيجة كـ :

١. الميكروفو ، ن متصل ونتيجة الكاريوكي قيد التشغيل.

٢. في نهاية كل فصل/عنوان لقرص الكاريوكي.

– إذا كان كاريوكي **DVD** يحتوي على أي معلومات حول محرك النتيجة.

– في حالة **VCD**، لا يستطيع الجهاز التمييز بين الكاريوكي الصلب أو الأفلام، وعندئذ ستظهر النتيجة دومًا.

٣. ستظهر نتيجة الكاريوكي عند انتهاء وقت كل فصل/عنوان لمدة **6** ثوانٍ تقريبًا

بر نامج تسجيل الصوت بطر يقة كار يوكي (KARAOKE)

١. أدخل وسائط تخزين USB في مقبس USB ثم وصل قابس بالميكروفون بالميكروفون.

٢. لبدء تشغيل بر نامج التسجيل كاريوكي ، اختر أحد ملفات VCD/DVD/SCVD ، ثم اضغط زر RECORD (تسجيل).

٣. عند التسجيل ، لا يستطيع المستخدم سوي الضغط على زر STOP (إيقاف) وزر PAUSE (إيقاف مؤقت) لإلغاء التسجيل.

٤. عند قيام المستخدم بعملية الإلغاء ، فإنه سيتم حفظ نتيجة الملف.

ملاحظة
- إذاكنتسمع صوتًا معينًا (صراخ أو نباح) عند استخدام ميزة كارو كي، فانقل الميكروفو ن بعيدًا عن المكبرات أو قم بخفض مستوى صوت الميكروفون أو مستوى صوت لمكبر.
- عند تشغيل قر ص يشتمل على ملفات MP3 وWMA وLPCM، فلن تعمل ميزة كاروكي.
- عند توصيل MIC، لا يعمل طرف التوصيل DIGITAL OUT.
- يصدر صوت MIC صوت من خلال خرج السناكر ي فقط.
- في حالة توصيل مايكروفون بمقبس المايكروفون (MIC) الموجود باللوحة الأمامية، يتم تغيير نظام الصوت 5.1CH إلى نظام الصوت 2CH تلقائيًا، ولا يمكن تغيير هذه الحالة ما لم يتم فصل المايكروفون.

كاريوكي الخاص بي

تستخدم ميزة "كاريوكي الخاص بي" في التمكين من استخدام أقراص VCD/DVD بمثابة أقراص كاريوكي، من خلال إزالة الصوت البشري الرئيسي.

استدام ميزة "كاريوكي الخاص بي" :

١. قم بتوصيل الميكروفون.

٢. اختر أعداد"كاريوكي الخاص بي" من **Settings (الإعدادات)** ← Audio (الصوت) ← My Karaoke (كاريوكي الخاص بي) ثم حدد واحدًا من بين الأوصاع المتاحة التالية :

- الأصواتالأ صلية : سيبقي هذا الإعداد علي الصوت البشري الأصلي.

- حدالتقليل الأدنى : يقلل هذا الإعداد من الصوت البشري الأساسي إلى حدما
- حدالتقليل الأقصى : يقلل هذا الإعداد من الصوت البشري الأساسي إلى حد كبير
٣. أدخل وسيط DVD أو VCD وشغله، حيث تقتصرهذه الميزة على أقراص VCD/DVD بخلاف النوع كاريوكي.

ملاحظة

١. لن تكون هذه الميزة متاحة في الحالات التالية :
- ازالة الميكر وفون
- تغييرعداد " كاريوكي الخاص بي " إلى" الأصوات البشرية الأصلية "
- تشغيل صوت كاريوكي
- تشغيل بوع ملفغيرمدعوم (مثل : avi.* و mp3.* و divx.* إلخ)
٢. لن يظهر لك إشعار منبثق عند تعطيل الميزة.

تغيبط Setup Menu

استخدام Setup Menu

تتيح لك القائمة Setup تخصيص مشغل DVD عن طريق السماح بتحيد تفضيلات اللغة المختلفةوإعداد مستوى ر نيسي ،بل وضبط المشغل على نو ع شاشة التليفز يون المتو فرة لديك.

١. أثناء ضبط الوحدة على الوضع Stop ، اضغط على الزر **MENU** بو حكم عن بُعد. استخدم الزرين ◄/► لتحديد **الإعدادات** ، ثم اضغط على الزر **ENTER**.
٢. استخدم الزرين ▼/▲ لتحديد **Setup** ، ثم اضغط على ► أو الزر **ENTER**.
٣. اضغط على الزرين ▼/▲ للول إلى الميز ات المختلفة . اضغط على ► أو الزر **ENTER** للو صول إلى الميز ات الفر عية.
٤. لإخفا ء عر ض شاشة الإ عداد بعد إجر اء الإ عداد، اضغط على الزر **RETURN** مرةً.

ضبط خيارات العرض

تتيح للك خيار ات الصوت إعداد جهاز الصوتوإعدادات حالة الصوتحسب نظام الصو ت المستخدم.

١. أثناء ضبط الوحدة على الوضع Stop ، اضغط على الزر **MENU** بو حكم عن بُعد. استخدم الزرين ◄/► لتحديد **الإعدادات** ، ثم اضغط على الزر **ENTER**.
٢. اضبط على الزرين ▼/▲ لتحديد **عرض** ، ثم اضغط على ► أو الزر **ENTER**.
٣. اضبط على الزرين ▼/▲ لتحديد المصر المطلوب، ثم اضغط على أو الزر ، ثم اضغط على ► أو الزر **ENTER**.

ملاحظة

- ارجع إلى دليل مستخدم التليفزيون للتعر ف عى ما إذا كان التليفز يون يد عم المسح المتقدم أم لا . وإذا كان التليفز يون يد عم الاستعر اض المتقدم، فاتبع التعليمات الواردة في دليل مستجدم التليفز يون فما يتلقياعدادات الاستعر اض المتقدم في قائمة نظام التليفزيون.
- في حالة ضبط Video Output بطريقة غير صحيحة، قد لا تظهر الشاشة.
- عند تغيير مستوى الدقة أثناء التشغيل، قد يتطلب الأمر ثوان قليلة لظهورة العلاية

ضبط خيارات الصوت

تتيح للك خيار ات الصوت إعداد جهاز الصوتوإعدادات حالة الصوت حسب نظام الصو ت المستخدم.

١. أثناء ضبط الوحدة على الوضع Stop ، اضغط على الزر **MENU** بو حكم عن بُعد. استخدم الزرين ◄/► لتحديد **الإعدادات** ، ثم اضغط على الزر **ENTER**.
٢. اضبط على الزرين ▼/▲ لتحديد **الصوت** ، ثم اضغط على ► أو الزر **ENTER**.
٣. اضبط على الزرين ▼/▲ لتحديد المصر المطلوب، ثم اضغط على أو الزر ، ثم اضغط على ► أو الزر **ENTER**.

ملاحظة

- عند تشغيل قر ص يشتمل على صوت MPEG في تحديد bitstream ،قد لا يتثمل امحور على خرج صوتوهو يستندإلىمستقبل الصوت
- لا يوجد خرج صوتتناظري عند تشغيل قرص صوت .
- حتى أثنا ء ضبط PCM Down Sampling على off.
• ستقوم بعض الأقر اص بإخراج الصو ت ذي المعاينة المنخفضة فقط منخلال عمليات الخر ج الر قمي.

تم التصنيع بمو جب تر خيص من Dolby Laboratories. "Dolby" ورمز حر ف D المز ود ج يمثلان علامتين ل Dolby Laboratories.

ضبط خيارات النظام

١. أثناء ضبط الوحدة على الوضع Stop ، اضغط على الزر **MENU** بو حكم عن بُعد. استخدم الزرين ◄/► لتحديد **الإعدادات** ، ثم اضغط على الزر **ENTER**.
٢. اضبط على الزرين ▼/▲ لتحديد **نظام** ، ثم اضغط على ► أو الزر **ENTER**.
٣. اضبط على الزرين ▼/▲ لتحديد المصر المطلوب، ثم اضغط على أو الزر ، ثم اضغط على ► أو الزر **ENTER**.

ضبط ميزات اللغة

إذا تم ضبط قائمة المشغلو قائمة الأقرصولغة الصو ت و لغة التر جمة المصا حبة بشكل مسبق، فستظهر جميعًا بشكل تلقائي في كل مر ة يتم فيها عر ض فيام.

١. أثناء ضبط الوحدة على الوضع Stop ، اضغط على الزر **MENU** بو حكم عن بُعد. استخدم الزرين ◄/► لتحديد **الإعدادات** ، ثم اضغط على الزر **ENTER**.
٢. اضبط على الزرين ▼/▲ لتحديد **اللغة** ، ثم اضغط على ► أو الزر **ENTER**.
٣. اضبط على الزرين ▼/▲ لتحديد اللغة المطلوبة، ثم اضغط على أو الزر ► أو الزر **ENTER**.

ملاحظة

- يتم تديد اللغة و تعو د الشاشة إلى قائمة Language Setup.
- لإخفاء عرضقائمة الإعداد، اضغط على الزر Menu.
- إذا كانت اللغة المحددة غير مسجلة على القرص فسيتم تحديد اللغة الأصلية مسبقة التسجيل.
- حدد "Original" إذا كنت تريد ضبط الغة الاقتر اضية لمادة المسجلة بحيث تكون اللغة الأ صلية لتسجيل القر ص.
- حدد "Automatic" إذا كنت تريد ضبط الغة المصاحبة على نفس
- قد لا تشمل بعض الأقر اص اللغة التي تم تحد يد ها كلغة أولى ،وفي تلك الحالة يستخدم القرص إعداد اللغة الأصلية

ضبط خيارات الحماية

وظيفة Parental Control بالاشتر اك مع أقراص DVD الشي تمتعيين تصنيف لها بحيث تسا على التحكم في أقر اص DVD التي تشا تمل هد ها الأ سر ة. يو جد ما يصل إلى ٨ مستو يات تصنيف على القر ص.

إعداد مستوى التصنيف و تغيير كلمة المرور

١. أثناء ضبط الوحدة على الوضع Stop ، اضغط على الزر **MENU** بو حكم عن بُعد. استخدم الزرين ◄/► لتحديد **الإعدادات** ، ثم اضغط على الزر **ENTER**.
٢. اضبط على الزرين ▼/▲ لتحديد **الأمان** ، ثم اضغط على ► أو الزر **ENTER**. أدخل كلمة المرور.
٣. يجب إدخال كلمة المرور الافتراضية عند الوصول إلى الأمان لأول مرة: .0000 لإدخال كلمة المرور الافتراضية، يمكنك تمييز 0 على الشاشة والضغط على والضغط على الزر **ENTER** (إدخال) 4 مرات. لتغيير كلمة المرور الافتر اضية، يمكنك الاطلاع على

Change Password **(تغيير كلمة المرور).**

٤. اضبط على الزرين ▼/▲ لتحديد **الوالدين** ، ثم اضغط على ► أو الزر **ENTER**.

٥. اضغط على الزر ▼/▲ لتحديد Rating Level المطلوب ، ثم اضغط على الزر **ENTER**.

كلما زاد مستوى التقييم، زاد مستوى نضج المحتوى المسموح به.

-إذا حددت المستوى **أمن‌الطفل**، فلن يتم تشغيل الأقراص التي تحمل التقييم 2 أوتقييمًا أعلى إلابعد إدخال كلمةالمرور.

مستويات الحماية :

- **أمن‌الطفل**
- G (الجمهور العام): جميع الأعمار المسموحلها
- PG (التو جيه الأ بو ي المقترح): الممكن وجود بعض المو اد غير الملائمة للأطفال.
- PG-13 (تحذير الآ با ء بشدة): من المحتمل وجود بعض المو اد غير الملائمة لأ طفال تحت سن 13.
- PGR (التو جيه الأبو ي المقتر ح): ليس من الضرور ة عدم ملاءمتها للأطفالوهك من الو اجب تحفُّظ المشا هدومر اقبة الآباءوالأوصياء للمشاهدين الصغار.
- R (محظور) : من المقتر ض وجود صحبة للمشاهدين تحت سن 17
- NC-17 (NC 17) : لا يتم السما ح لأحد في سن 17 فأقل
- **بالغ**

ملاحظة

- إذا نسيت كلمة المرور الخاصة بك ، فانظر"نسيان كلمة المرور" في دليل استكشاف الأخطاء وإصلاحها

تغيير كلمة المرور

لتغيير كلمة المرور، اتبع الخطوات التالية :

١. من **"قائمة الإعدادات"**، حدد **الأمان (Security)**، ثم اضغط على الزر **ENTER (إدخال).**

٢. أد خل كلمة المرور الحلاية المكونة من 4 أرقام. إذا لم تكن قد غيرت كلمة المرور، فأدخل كلمة المرورالافتر اضية: .0000.
لإدخال رقم، استخدم الزرين ▼/▲/►/◄ لتمييزالرقم، ثم اضغط على الزر **ENTER (إدخال).**

٣. حدد **تغيير كلمة المرور (Change Password)**، ثم اضغط على الزر **ENTER (إدخال).**

٤. أد خل كلمة المرورالجديدة المكونة من 4 أرقام. استخدم الزرين ▼/▲/►/◄ لتحديدرقم، ثم اضغط على الزر**ENTER (إدخال).**
كررذلك **4** مرات.

٥. أعد إدخل كلمة المرورالجديدة بالطريقة داتها للتأكيد. بذلك ستظهرقائمة "الأمان" مرة أخرى.

ضبط خيارات العامة

١. أثناء ضبط الوحدة على الوضع Stop ، اضغط على الزر **MENU** بو حكم عن بُعد. اسخدم الزرين ►/◄ لتحديد **الإعدادات** ، ثم اضغط على الزر **ENTER**.

٢. اضبط على الزرين ▼/▲ لتحديد **عام** ، ثم اضغط على ► أو الزر **ENTER**.

٣. اضبط على الزرين ▼/▲ لتحديد المصر المطلوب، ثم اضغط على أو الزر ، ثم اضغط على ► أو الزر **ENTER**.

ضبط خيارات الدعم

يتيح لك خيار الدعم (Support) التعرف على معلومات مشغل الدي في دي (DVD) مثل رمز الوضع، نسخة البرنامج، الرقم المسلسل ورقم الإصدار حيث يمكن الاطلاع على هذه المعلومات على ظهر مشغل الدي في دي (DVD).

١. أثناء ضبط الوحدة على الوضع Stop ، اضغط على الزر **MENU** بو حكم عن بُعد. اسخدم الزرين ►/◄ لتحديد **الإعدادات** ، ثم اضغط على الزر **ENTER**.

٢. اضبط على الزرين ▼/▲ لتحديد **الدعم**، ثم اضغط على ► أو الزر **ENTER**.

٣. حدد **معلومات المنتج**، ثم اضغط على ► أو الزر **ENTER**.

المرجع

استكشاف الأخطاء وإصلاحها

قبل طاب الصيانة (استكشاف الأخطا ء وإصلاحها) ، يرجى الرجوع إلى ما يلي.

المشكلة	الإجراء
الشاشة لا تظهر	• اضغط على الزر II▶ (على اللوحة الأمامية) لمدة أكثر من٥ ثوانٍ أثناء عدم وجود أي قرص بالداخل. ستعود كافة الإعدادات إلى إعدادات المصنع مرةً أخرى
لا يمكن تذكر كلمة المرير	• اضغط على الزر II▶ (على اللوحة الأمامية) لمدة أكثر من٥ ثوانٍ أثناء عدم وجود أي قرص. بالداخل. ستعود كافة الإعدادات إلى قيم إعدادات المصنع بما في ذلك كلمة المرور. لاتلجأ إلى استخدام ذلك الإ في حالة الضرورة القصوى.

المواصفات

عامة	متطابات التيار الكهر بي	١١٠-٢٤٠ فو لت من التيار المتردد ، بتردد ٥٠/٦٠ هر تز
	استهلاك التيار الكهر بي	لعرفة مواصفات مزود الطاقة ومعدلات استهلاكها، ا لرجاء الرجوع إلى اللصق الوجود على النتج
	الوزن	١,١٠ كخم
	الأبعاد	٣٠٠ ملم (عرض) X ٢٠٨ ملم (عمق) X ٤٢ ملم (ارتفاع)
	نطاق در جة حر ار ة التشغيل	+5°C إلى +35°C
	نطاق رطو بة التشغيل	١٠٪ إلى ٧٥٪
خر ج الفيديو	فيديو مركب	قناة ١ : 1.0 Vp-p (حمل٧٥ أوم)
	مكو ن الفيد يو	Y : 1.0 Vp-p (حمل٧٥ أوم) Pr : 0.70 Vp-p (حمل٧٥ أوم) Pb : 0.70 Vp-p (حمل٧٥ أوم)
جر ج الصو ت	طرف الإخراج	CH ٢
	أقصى مستو ى للإ جر اج	Vrms ٢
	خر ج صو ت ر قمي	٢٠ هرتز إلى٢٠ كتلو هرتز
	استجا بة التدد	طر ف ثنائي المحور (S/PDIF)

بشركة SAMSUNG في كافة أنحاء العالم

إذا كان لديكأي استفسار أوتعليق ملى منتجات Samsung. فيجرى الاتصال مبركرخدمة العملاء الخاص بشركة SAMSUNG.

Area	Contact Centre ☎	Web Site
▪ Asia Pacific		
AUSTRALIA	1300 362 603	www.samsung.com
NEW ZEALAND	0800 SAMSUNG (0800 726 786)	www.samsung.com
CHINA	400-810-5858	www.samsung.com
HONG KONG	(852) 3698 4698	www.samsung.com/hk www.samsung.com/hk_en/
INDIA	1800 1100 11 3030 8282 1800 3000 8282 1800 266 8282	www.samsung.com
INDONESIA	0800-112-8888 021-5699-7777	www.samsung.com
MALAYSIA	1800-88-9999	www.samsung.com
PHILIPPINES	1-800-10-SAMSUNG(726-7864) for PLDT 1-800-3-SAMSUNG(726-7864) for Digitel 1-800-8-SAMSUNG(726-7864) for Globe 02-5805777	www.samsung.com
SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com
THAILAND	1800-29-3232 02-689-3232	www.samsung.com
TAIWAN	0800-329-999 0266-026-066	www.samsung.com
VIETNAM	1 800 588 889	www.samsung.com

Area	Contact Centre ☎	Web Site
▪ Middle East		
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com
OMAN	800-SAMSUNG (726-7864)	www.samsung.com
KUWAIT	183-2255	www.samsung.com
BAHRAIN	8000-4726	www.samsung.com
Egypt	08000-726786	www.samsung.com
JORDAN	800-22273	www.samsung.com
IRAN	021-8255	www.samsung.com
Morocco	080 100 2255	www.samsung.com
Saudi Arabia	9200-21230	www.samsung.com
▪ Africa		
NIGERIA	0800-726-7864	www.samsung.com
Ghana	0800-10077 0302-200077	www.samsung.com
Cote D' Ivoire	8000 0077	www.samsung.com
Senegal	800-00-0077	www.samsung.com
Cameroon	7095- 0077	www.samsung.com
KENYA	0800 724 000	www.samsung.com
UGANDA	0800 300 300	www.samsung.com
TANZANIA	0685 88 99 00	www.samsung.com
SOUTH AFRICA	0860-SAMSUNG(726-7864)	www.samsung.com

ENERGY STAR